

# **TAG DESCRIPTION TABLE**

MIL-DTL-7700G Appendix C

16 September 2004



---

# abbrsect

## Abbreviation Section

*Description:* Identifies the paragraph used to define abbreviations/acronyms and the associated list.

*Source paragraph:* 4.3.4 & 4.5.9

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*), (abbrtitle?, acronymlist)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

deltype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

## abbrtitle

### Abbreviation Title

*Description:* Identifies the title for the list of acronyms and abbreviations.

*Source paragraph:* 4.3.4 & 4.5.9

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

## acronym

### Acronym

*Description:* Identifies the first time an acronym or abbreviation is used in a chapter. The def part of the acronym is used to define the acronym/abbreviation, while the term part of the acronym contains the actual acronym/abbreviation. Within the text, the term portion will be surrounded with parenthesis.

*Source paragraph:* 4.3.4 & 4.5.9

*Content Model:* (def, term)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# acronymlist

## Acronym/Abbreviation List

*Description:* Identifies the list of acronyms and abbreviations.

*Source paragraph:* 4.3.4 & 4.5.9

*Content Model:* ((term, def)\*) - (acronym|figure|table|foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
rtermwidth	<b>NUTOKEN</b>	<b>2.5IN</b>	Allows you to define the right term width.
ltermwidth	<b>NUTOKEN</b>	<b>1IN</b>	Allows you to define the left term width.
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

---

# activity

## Reporting Activity

*Description:* Identifies the activity submitting a technical publication deficiency report list.

*Source paragraph:* 4.5.9

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# addcond

## Additional Conditions

*Description:* Used to break the current page to a verso page to place "Other Considerations".

*Source paragraph:*

*Content Model:* ((syms1, (para|(paras, paras+)))\*) , endcond?) +(warning | caution)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# address

## Change Sheet Name/Address

*Description:* Identifies the name and address of the activity responsible for preparation of the change instruction sheet.

*Source paragraph:* 4.7.3.10.2

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# appendix

## Appendix

*Description:* Identifies an appendix to the manual.

*Source paragraph:* 4.2.9.6

*Content Model:* (title, para0+) +(ftnote|figure|table|foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.

revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## applic

### Applicability/Effectivity Definition Entry

*Description:* Defines applicability/effectivity markings.

*Source paragraph:* 4.3f & 4.5.9

*Content Model:* (term, def)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#REQUIRED</b>	Allows the author to generate a unique ID for use when referencing this entry.

## applicabil

### Applicability/Effectivity

*Description:* Identifies a portion of text as being applicable to a specific model, serial number, part number, etc. Use of this element will cause the applicabilty/effectivity markings defined in the applicability definition (applicdef) to appear at that point in running text.

*Source paragraph:* 4.3f

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) - (applicabil | figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
applicref	<b>IDREFS</b>	<b>#REQUIRED</b>	Allows you to assign an applicable reference to this element.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## applicdef

### Applicability/Effectivity Definition

*Description:* Identifies the paragraph used to define applicability/effectivity markings, and the associated list.

*Source paragraph:* 4.3f

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*),  
(applttitle?, appllchd?, applic+))

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
applicboxing	<b>(0   1)</b>	<b>0</b>	Allows user to select whether or not the "term" will appear with reverse video or not.
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
deltypes	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.

delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## applichd

### Applicabilty/Effectivity List Column Headings

*Description:* Defines the column headings used for the applicabilty/effectivity list.

*Source paragraph:* 4.3f

*Content Model:* (term, def)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## apptitle

### Applicability/Effectivity Definition

*Description:* Identifies the title for the applicabilty/effectivity list.

*Source paragraph:* 4.3f

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## authnot

### Authority Notice

*Description:* Identifies the authority notice at the bottom of the title page.

Source paragraph: 4.5.1.15  
Content Model: #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## auxfront

Front matter for volumes/parts

*Description:* Identifies the front matter that appears in second and subsequent volumes, and second and subsequent parts in a volume.

*Source paragraph:* 4.2.9.1

*Content Model:* (idinfo, warnpage?, chginsst?, (lep|vollep), verstat?, tpdr?, chgrec?, (contents|volcontents), (illuslist|volilluslist)?, (tablelist|voltageablelist)?, (foreword|preface|intro), safesum?) +(ftnote)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## body

Body

*Description:* Identifies the portion of the manual where chapters are used, exclusive of front matter and appendices, indexes, etc.

*Source paragraph:* 4.2.9.3 & 4.5.1.3.2 & 3.2.38

*Content Model:* (normproccl, emergproccl+, performdatacl\*) +(ftnote)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
numcols	1  2		Allows the author to define the page format as one or two columns for this section of the manual.

---

## brk

Break

**Description:** This element is used to indicate that a column, line, or page break should be forced at that point. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

**Source paragraph:** NONE

**Content Model:** EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
type	<b>COL LINE NPG</b>		Allows the author to define what type of break will occur when the brk element is used - column, line, or page.

## C

### Caution

**Description:** Allows for a boxed 'C' as a symbol in the addcond.

**Source paragraph:**

**Content Model:** EMPTY

syms , syms1

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
None			

## caution

### Caution

**Description:** Identifies a CAUTION in the manual.

**Source paragraph:** 4.3.10

**Content Model:** (para\*) -  
(randlist|deflist|seqlist|figure|table|foldout|warning|caution|precaut)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## change

### Changed Information

*Description:* Identifies material that has been changed. In order to add material, the type attribute should be set to add, and the change element should surround the added material. In order to delete material where a complete history of all changes to the document are being preserved, the type attribute should be set to delete and the change element should surround the deleted material. If all changes are not being preserved, change the material and surround it with a change element, setting the type attribute to add.

*Source paragraph:* 4.7.3.9

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(change | figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
level	<b>NMTOKEN</b>	<b>#REQUIRED</b>	Defines the change level for the modification.
change	<b>ADD DELETE</b>		Defines the type of change - addition or deletion of text.
mark	<b>%YESORNO; 1</b>		Allows the author to define if a change mark will appear for this change. 1. will produce a change bar on the page - 0 will suppress it.
revchg	<b>%YESORNO; 0</b>		Allows the author to tag whether this modification is for a revision or a change. Zero indicates a change. 1. for a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## chapter

### Chapter

*Description:* Identifies a chapter.

*Source paragraph:* 4.2.9.3

*Content Model:* (title, ((section, section+)|para0+)) +(figure|table|foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## chgdate

### Change Date

*Description:* Identifies the date of the latest change.

*Source paragraph:* 4.5.1.17

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## chghistory

### Change History

*Description:* Identifies the beginning of the change history dates. The first date in the chghist is the original date and subsequent dates are change 1, change 2, etc.

*Source paragraph:* 4.5.3

*Content Model:* (chginfo\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## chginfo

### Change Information

*Description:* Container element to identify the change information contained in the change history of the document.

*Source paragraph:* 4.5.3

*Content Model:* (chgtxt?, date)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## chginsst

### Change Instruction Sheet

*Description:* Identifies the change instruction sheet.

*Source paragraph:* 4.7.3.10.2

*Content Model:* (chgnum, address, date, prtitle, effdatenot?, discl?, distrib, expcont?, destr?, chgpara+, chglist, sigblock?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## chglst

### Change List

*Description:* Identifies the Remove Pages and Insert Pages columns on the change instruction sheet.

*Source paragraph:* 4.7.3.10.2

*Content Model:* (tabmat | (removepg, insertpg)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# chgpara

## Change para

*Description:* Identifies the paragraph change status.

*Source paragraph:* 4.7.3.11.2

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# chgnum

## Change Number/Letter

*Description:* Identifies the latest change number/letter.

*Source paragraph:* 4.7.3.1, 4.2.1.4.2.3, 4.5.1.17, & 4.5.3.1

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# chgrec

## Change Record

*Description:* Identifies the change record page. This page will be an empty table whose contents will be completed by the person filing the change pages in the manual. The change record page will be automatically generated by the FOSI.

*Source paragraph:* 4.5.5

*Content Model:* EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# chgtxt

## Change Text

*Description:* This element is optional and is used to provide a alpha representation of the current change level. This element will only be tagged by those branches of the armed services that require alpha change numbers. For all other users, this element is optional and should not be tagged.

*Source paragraph:* 4.5.3

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# clink

## Contextual Link

*Description:* One of several HyTime elements. Can be used in any situation similar to the xref or extref element - will reference any nameloc declared.

*Source paragraph:*

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
linkend	<b>CDATA</b>	<b>#IMPLIED</b>	References a linkend declared within a nameloc element. Other attributes are not included because at this time - they are not applicable during a period of alpha test and will be added to the TDT as the options are explored and implemented.
HyBase	<b>NAME #FIXED</b>	<b>HYLINK</b>	Used in combination with HyTime to establish contextual link.
HyBnames	<b>CDATA #FIXED</b>	<b>REFSUB LINKEND</b>	Used in combination with HyTime to establish contextual link.
anchrole	<b>CDATA #FIXED</b>	<b>REFMARK REF-SUB #LIST</b>	Used in combination with HyTime to establish an anchor role for contextual links.
anchcstr	<b>NAMES</b>	<b>SELF REQUIRED</b>	Used in combination with HyTime to establish type of anchor string defined for a contextual link.

---

# clitem

## checklist item

*Description:* Checklist task item

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.9/MIL-PRF-5096F paragraph 3.7.5.1

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex)+)

clstep1, clstep2, clstep3, ifstep1, ifstep2

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N)</b>	'N'	Identifies security level of the task

# clstep1

## Checklist First Level Procedural Step

*Description:* Identifies a first level procedural step.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.9/MIL-PRF-5096F paragraph 3.7.5.1

*Content Model:* ((clitem | condition?)+, clstep2\*)

procedure

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>"DELETE   REAL   RESERVE   NA"</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>"EMPTY   DELETED   RESERVED   NOTAPP"</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
stepenum	<b>NUMBER</b>	<b>#IMPLIED</b>	Used to restart numbering after an ifthen section of an instance.
manwc	<b>W   C</b>	<b>#IMPLIED</b>	Used to indicate whether the flight manual has a warning or caution for that step which did not carry over into the checklist.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.

verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
afmem	NUMBER	#IMPLIED	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	NUMBER	#IMPLIED	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	NUMBER	#IMPLIED	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.
crewcoordcirc	(0   1)	0	Allows step number to be circled. Only use on clsteps.
feresponse	YESORNO	0	A "through-flight" type of operation, where a crewmember will perform, as a minimum, those steps indicated. One example of this is an ERCC (Engines Running Crew Change) where a crew lands the jet, and only accomplishes enough steps in a shutdown checklist to make the jet safe while leaving the engines running, and a fresh crew gets on board and makes the jet ready for flight again, by accomplishing the "through-flight" items. Only use on clsteps.
thruflt	YESORNO	0	Preceding any checklist step means the step is contained in section II and that a response is required when the flight engineer reads the item. Only use on clsteps.
nomisscrw	YESORNO	0	Indicate specific checklist steps the engineer will accomplish when a mission crew is not present. This would only happen when training is being accomplished which does not require the mission crew, such as pattern work, or perhaps air refueling. Only use on clsteps.

## clstep2

### Checklist Second Level Procedural Step

*Description:* Identifies a second level procedural step.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.9/MIL-PRF-5096F paragraph 3.7.5.1

*Content Model:* ((clitem | condition)+, clstep3\*)

clstep1

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
stepenum	NUMBER	#IMPLIED	Used to restart numbering after an ifthen section of an instance.
manwc	W   C	#IMPLIED	Used to indicate whether the flight manual has a warning or caution for that step which did not carry over into the checklist.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference to this element.

delttype	"DELETE   REAL   RESERVE   NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY   DELETED   RESERVED   NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
afmem	NUMBER	#IMPLIED	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	NUMBER	#IMPLIED	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	NUMBER	#IMPLIED	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.
crewcoordcirc	(0   1)	0	Allows step number to be circled. Only use on clsteps.
feresponse	YESORNO	0	A "through-flight" type of operation, where a crewmember will perform, as a minimum, those steps indicated. One example of this is an ERCC (Engines Running Crew Change) where a crew lands the jet, and only accomplishes enough steps in a shutdown checklist to make the jet safe while leaving the engines running, and a fresh crew gets on board and makes the jet ready for flight again, by accomplishing the "through-flight" items. Only use on clsteps.
thruflt	YESORNO	0	Preceding any checklist step means the step is contained in section II and that a response is required when the flight engineer reads the item. Only use on clsteps.
nomisscrw	YESORNO	0	Indicate specific checklist steps the engineer will accomplish when a mission crew is not present. This would only happen when training is being accomplished which does not require the mission crew, such as pattern work, or perhaps air refueling. Only use on clsteps.

## clstep3

### Checklist Third Level Procedural Step

*Description:* Identifies a third level procedural step.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.9/MIL-PRF-5096F paragraph 3.7.5.1

*Content Model:* ((clitem | condition)+, clstep4\*)

clstep2

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
stepenum	<b>NUMBER</b>	<b>#IMPLIED</b>	Used to restart numbering after an ifthen section of an instance.
manwc	<b>W   C</b>	<b>#IMPLIED</b>	Used to indicate whether the flight manual has a warning or caution for that step which did not carry over into the check-list.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
applicref	<b>IDREFS</b>	<b>#REQUIRED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>"DELETE   REAL   RESERVE   NA"</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>"EMPTY   DELETED   RESERVED   NOTAPP"</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.
crewcoordcirc	<b>(0   1)</b>	<b>0</b>	Allows step number to be circled. Only use on clsteps.
feresponse	<b>YESORNO</b>	<b>0</b>	A "through-flight" type of operation, where a crewmember will perform, as a minimum, those steps indicated. One example of this is an ERCC (Engines Running Crew Change) where a crew lands the jet, and only accomplishes enough steps in a shutdown checklist to make the jet safe while leaving the engines running, and a fresh crew gets on board and makes the jet ready for flight again, by accomplishing the "through-flight" items. Only use on clsteps.
thruflt	<b>YESORNO</b>	<b>0</b>	Preceding any checklist step means the step is contained in section II and that a response is required when the flight engineer reads the item. Only use on clsteps.
nomisscrw	<b>YESORNO</b>	<b>0</b>	Indicate specific checklist steps the engineer will accomplish when a mission crew is not present. This would only happen when training is being accomplished which does not require the mission crew, such as pattern work, or perhaps air refueling. Only use on clsteps.

# clstep4

## Checklist Fourth Level Procedural Step

*Description:* Identifies a fourth level procedural step.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.9/MIL-PRF-5096F paragraph 3.7.5.1

*Content Model:* (clitem)

clstep3

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
stepenum	<b>NUMBER</b>	<b>#IMPLIED</b>	Used to restart numbering after an ifthen section of an instance.
manwc	<b>W   C</b>	<b>#IMPLIED</b>	Used to indicate whether the flight manual has a warning or caution for that step which did not carry over into the checklist.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
applicref	<b>IDREFS</b>	<b>#REQUIRED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>"DELETE   REAL   RESERVE   NA"</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>"EMPTY   DELETED   RESERVED   NOTAPP"</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.
crewcoordcirc	<b>(0   1)</b>	<b>0</b>	Allows step number to be circled. Only use on clsteps.

feresponse	YESORNO	0	A "through-flight" type of operation, where a crewmember will perform, as a minimum, those steps indicated. One example of this is an ERCC (Engines Running Crew Change) where a crew lands the jet, and only accomplishes enough steps in a shutdown checklist to make the jet safe while leaving the engines running, and a fresh crew gets on board and makes the jet ready for flight again, by accomplishing the "through-flight" items. Only use on clsteps.
thruflt	YESORNO	0	Preceding any checklist step means the step is contained in section II and that a response is required when the flight engineer reads the item. Only use on clsteps.
nomisscrw	YESORNO	0	Indicate specific checklist steps the engineer will accomplish when a mission crew is not present. This would only happen when training is being accomplished which does not require the mission crew, such as pattern work, or perhaps air refueling. Only use on clsteps.

---

## cmbr1

### Crew Member 1

*Description:* Identifies the Crew Member assigned to column 1 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (procstep?, procstep2?, procstep3?, procstep4?, warning?, caution?, note?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## cmbr2

### Crew Member 2

*Description:* Identifies the Crew Member assigned to column 2 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (procstep?, procstep2?, procstep3?, procstep4?, warning?, caution?, note?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## cmbr3

## Crew Member 3

*Description:* Identifies the Crew Member assigned to column 3 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (procstep?, procstep2?,procstep3?,procstep4?,warning?, caution?, note?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## cmbr4

### Crew Member 4

*Description:* Identifies the Crew Member assigned to column 4 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (procstep?, procstep2?,procstep3?,procstep4?,warning?, caution?, note?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## cmbr5

### Crew Member 5

*Description:* Identifies the Crew Member assigned to column 5 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (procstep?, procstep2?,procstep3?,procstep4?,warning?, caution?, note?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## cogact

### Cognizant Field Activity

*Description:* Identifies Cognizant Field Activity on the title page and is included in the distribution statement. This is a Navy requirement.

Source paragraph: 4.5.1.11

Content Model: #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# colspec

## Column Specification

*Description:* Defines a column in a table. Each column must have a column specification. The column specification defines the width of the column and an optional name used when column is starting or ending a horizontal span or referenced in a table entry. Column specifications in a table group apply to the table heading (boxheads) and the table body. The table heading can redefine the column specifications if needed, however, the table body must use the column specifications defined in the table group.

Source paragraph: 4.3.9

Content Model: EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
colname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Allows the author to define a column name.
colnum	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows the author to define a column number.
align	<b>LEFT RIGHT CENTER JUSTIFY CHAR</b>	<b>#IMPLIED</b>	Allows the author to align text within the cell.
charoff	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Determines the distance the cell content should offset from the horizontal alignment character.
char	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the alignment character that can be used to align values within a column.
leftmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the left margin for the cell.
rightmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the right margin for the cell.
topmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the top margin for the cell.
botmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the bottom margin for the cell.
mindepth	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Allows you to define a minimum depth if desired.
colwidth	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to define the column widths.
colsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a vertical line to separate columns. A value of 1. for this attribute will generate column separators.
rowsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.

---

# condition

## Condition

*Description:* Identifies a possible condition under each procedure of an emergency procedure.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.6

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

procedure

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>U   C   S   N</b>	<b>N</b>	

---

## cont

### Continued

*Description:* Allows marking for continued column.

*Source paragraph:*

*Content Model:* EMPTY

procedure

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
None			

---

## contents

### Table of Contents

*Description:* Identifies the table of contents. For Army documents, the table of contents consists of chapter and section titles. For all other services, the table of contents consists of chapter, section, and paragraph titles. If an index is used, the table of contents consists of chapter, section, and primary paragraph titles. This information is automatically compiled by the FOSI.

*Source paragraph:* 4.5.6

*Content Model:* ((parano|subparano)?, paratitle, pnumber)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
security	<b>(U   C   S   N)</b>	<b>N</b>	Identifies security level of the document

---

# contractno

## Contract Number

*Description:* Identifies the contract number on the title page.

*Source paragraph:* 4.5.1.4

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# coordprocs

## Coordinated Procedures

*Description:* Provides a means of developing coordinated or simultaneous actions in parallel columns among crew members

*Source paragraph:* 3.2.12.3

*Content Model:* heading, tasks+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this manually.
numcols	<b>1   2   3   4   5</b>		Allows the author to define the number of columns for the Coordinated Procedures.

---

# copyright

## Copyright Notice

*Description:* Identifies the copyright notice on the title page.

*Source paragraph:* 4.1.2 & 4.5.1.14

*Content Model:* PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# cpos

## Crew position

*Description:* Identifies a crew position for coordinated steps.

*Source paragraph:*

*Content Model:* PCDATA

clstep1

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos

## Crew Position

*Description:* Identifies the crew position on the title page that the checklist applies to.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.2.1

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

idinfo

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos1

## Crew Position 1

*Description:* Defines the first crew position in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos2

## Crew Position 2

*Description:* Defines the second crew position in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos3

## Crew Position 3

*Description:* Defines the third crew position in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos4

## Crew Position 4

*Description:* Defines the fourth crew position in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# crewpos5

## Crew Position 5

*Description:* Defines the fifth crew position in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# dataiden

## Data Identification

*Description:* May be used to identify specific types of data (e.g. hazardous materials, special tools, etc.). Use of this element does not affect the formatted output, but is intended to be used in database functions and data searches.

*Source paragraph:* 4.5.1.7, 4.5.1.16, 4.5.1.17, & 4.5.3.1

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) - (dataiden | figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.
type	<b>CDATA</b>	<b>#REQUIRED</b>	Defines the type of data being used in the database functions and database searches.

---

# date

## Date

*Description:* Identifies a date.

*Source paragraph:* 4.5.1.17 & 4.5.9.4b

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | footnote)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## dateinc

### Date Incorporated

**Description:** Identifies the date the information affected by the directive or engineering change proposal was incorporated into the manual.

**Source paragraph:** 4.5.9.4d

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)-(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## ddchapter

### Difference Data Chapter

**Description:** Identifies the difference data chapter.

**Source paragraph:** 4.7.3.3

**Content Model:** (dddesc, (ddindex, ddsheet+)?)+(figure|table|foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.

delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## dddesc

### Difference Data Description

*Description:* Identifies the lead-in information for the difference data chapter.

*Source paragraph:* 4.7.3.3

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.

verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

## ddindex

### Difference Data Index

*Description:* Identifies the paragraph used to lead-in to the difference data index, and its associated list.

*Source paragraph:* 4.7.3.3.1

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*, ddlist)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	NUMBER	0	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcg	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.

hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## ddlist

### Difference Data List

*Description:* Identifies the listing of part numbers to corresponding difference data sheets.

*Source paragraph:* 4.7.3.3

*Content Model:* EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ddsheets

### Difference Data Sheet

*Description:* Identifies a difference data sheet.

*Source paragraph:* 4.7.3.3

*Content Model:* ((nomen, (partno+ | modelno+ | typedes+)), para0+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## def

### Definition

*Description:* Identifies a term and definition in a list.

*Source paragraph:* 4.3.4

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

---

## defhd

### Definition List Column Headings

*Description:* Identifies the column headings for a definition list.

*Source paragraph:* 4.3.4

*Content Model:* (term, def)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

NONE
------

---

# deflist

## Definition List

*Description:* Identifies a two-column definition list. This element can be used when a listing is needed to define particular terms.

*Source paragraph:* 4.3.4

*Content Model:* (title?, defhd?, (term, def)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
rtermwidth	<b>NUTOKEN</b>	<b>1.9IN</b>	Allows you to set the right term width.
ltermwidth	<b>NUTOKEN</b>	<b>0.7IN</b>	Allows you to define the left term width.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# destr

## Destruction Notice

*Description:* Identifies the destruction notice on the title page.

*Source paragraph:* 4.5.1.13

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# discl

## Disclosure Notice

*Description:* Identifies the disclosure notice on the title page. The title is automatically generated by the FOSI.

*Source paragraph:* 4.5.1.10

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
disclos1	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies which type of disclosure statement will appear on the title page. Use of this attribute will generate an alternate disclosure notice as opposed the notice generated by the FOSI.

---

# distrib

## Distribution Statement

*Description:* Identifies the distribution statement. The title is automatically generated by the FOSI.

*Source paragraph:* 4.5.1.11

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
type	<b>A OTHER</b>		Displays distribution statement A when type is equal to A. Attribute defaults to other allowing the author to enter their own distribution statement text.

---

# doc

## Document

*Description:* Identifies the entire document (technical manual).

*Source paragraph:* 4.1.7

*Content Model:* (docfmcl) +(pgrk|brk|subjinfo|line|modreq|location)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

service	(AF   NAVAIR   NAVSEA   SPAWARS   ARMY   MC   DLA   CG   DOD)	#REQUIRED	Identifies which branch of service.
docid	CDATA	#IMPLIED	Allows for the author to define an identification number for the document.
docstat	(REVISION   CHANGE   PRELIM   DRAFT   FORMAL)	PRELIM	Author can stipulate what form the manual is in.
verstatpg	(VER   UN-VER)	VER	Author can stipulate a verified or unverified manual. Use of this attribute will trigger the generation of the verification status page and the temporary file - vsmatter.dat. See the accompanying readme.txt file for verification status for more detail.
Index	NUMBER	0	Indicated whether an index is included in the manual. Attribute should be set to 1 when an index is present. Use of this attribute will affect the level of detail in the TOC
security	(U   C   S   N)	N	Identifies security level of the document
controlno	CDATA	00000000	System generated attribute values used included for compliance with the JCALS menu structure.
cycle	CDATA	NEW	System generated attribute values used included for compliance with the JCALS menu structure.
chglevel	NUMBER	#IMPLIED	System generated attribute values used included for compliance with the JCALS menu structure.
initlabel	NUMBER	#IMPLIED	System generated attribute values used included for compliance with the JCALS menu structure.
initpage	NUMBER	1.	System generated attribute values used included for compliance with the JCALS menu structure.
docno	CDATA	#IMPLIED	System generated attribute values used included for compliance with the JCALS menu structure.
highguid	NUMBER	0	System generated attribute values used included for compliance with the JCALS menu structure.
labelstyle	CDATA	FAN	System generated attribute values used included for compliance with the JCALS menu structure.
HyTime	NAME #FIXED	HYDOC	Used to alert the processing system that this is a HyTime compliant document. This attribute is only required and/or effective with a HyTime aware processor.

## docfmcl

### Flight Manual Abbreviated Checklist

*Description:* Second level tag under DOC. JCALS menuing system requires the DOC wrapper tag to be present. All attributes normally found on the document tag are on the DOC tag (see 38784STD-BV6 DTD)

*Source paragraph:* MIL-PRF-7700F paragraph 3.7

*Content Model:* (front, body) +(pgbrk | brk | subjinfo | line | modreq | location)

DOC element

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
pagetype	<b>(4X7 5X8GRAD 5X8NOGRAD 5X9GRAD 5X9NOGRAD  514X11  534X11)</b>	<b>#REQUIRED</b>	Attribute for choosing the page size/type of checklist.
thrufltsym	<b>(N1 ASTERISK1 PLUS1 X1 HASH1 DAGGER1)</b>	<b>N1</b>	A "through-flight" type of operation, where a crewmember will perform, as a minimum, those steps indicated. One example of this is an ERCC (Engines Running Crew Change) where a crew lands the jet, and only accomplishes enough steps in a shutdown checklist to make the jet safe while leaving the engines running, and a fresh crew gets on board and makes the jet ready for flight again, by accomplishing the "through-flight" items.
ferespon- sesym	<b>(N2 ASTERISK2 PLUS2 X2 HASH2 DAGGER2)</b>	<b>N2</b>	Preceding any checklist step means the step is contained in section II and that a response is required when the flight engineer reads the item.
nomisscrw- sym	<b>(N3 ASTERISK3 PLUS3 X3 HASH3 DAGGER3)</b>	<b>N3</b>	Indicate specific checklist steps the engineer will accomplish when a mission crew is not present. This would only happen when training is being accomplished which does not require the mission crew, such as pattern work, or perhaps air refueling

## docpart

### (Document) Part

*Description:* Identifies the next breakdown of a volume.

*Source paragraph:* 4.5.1

*Content Model:* ((front | auxfront), body, rear?)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## docpartn

### (Document) Part Number

*Description:* Specifies the number used to identify a (document) part

*Source paragraph:* NONE

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## doctype

### Type of Manual

*Description:* Identifies the type of manual on the title page (e.g. maintenance instructions, illustrated parts breakdown, inspection manual, etc.).

*Source paragraph:* 4.1.7

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## downgrd

### Downgrade Notice

*Description:* Identifies the classification downgrade notice on the title page.

*Source paragraph:* 4.4

*Content Model:* (phrase | oadr)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ecpno

### Engineering Change Proposal Number

*Description:* Identifies the ECP Number in the record of applicable technical directives.

*Source paragraph:* 4.5.9.4

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure  
| table | foldout)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## effdatenot

### Effective Date Notice

*Description:* Identifies the effective date notice on the title page.

*Source paragraph:* 4.5.1.8

*Content Model:* #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## emergproccl

### Emergency Procedures Checklist

*Description:* Checklists for all emergency procedures from the Flight Manual.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.6

*Content Model:* (title, secttoc, (consid | procedure+) +(sectocstr | figure | table | graphic  
| addcond | etitle | figtable| tabmat)

docfmcl

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>"DELETE   REAL   RESERVE   NA"</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
status	<b>"EMPTY   DELETED   RESERVED   NOTAPP"</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>"EMPTY   DELETED   RESERVED   NOTAPP"</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
emergsysltr	<b>CDATA</b>	<b>#IMPLIED</b>	Allows the letter to be entered for emergency procedure section numbering.

---

## emphasis

### Emphasis

**Description:** Identifies portions of text to be highlighted (e.g. underline, bold, etc.). This element is included to allow the author flexibility in composing the manual in accordance with this spec.

**Source paragraph:** NONE

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) - (emphasis|figure|table|foldout)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
type	<b>(U B BU I BI Q X O SUP SUB U)</b>	<b>#REQUIRED</b>	Displays different types of emphasis. u=underline b=bold bu=bold/underline i=italics bi=bold/italics q=quotes x=box o=overscore sup=superscript sub=subscript ui=underline/italics
fonsize	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Allows author to set the font size which will be applied to the text within the emphasis tags.

color	<b>BLACK   WHITE   RED   ORANGE   YELLOW   GREEN   BLUE   VI- OLET   BROWN   GRAY</b>	<b>#IMPLIED</b>	Specifies the color of the text.
-------	---	-----------------	----------------------------------

# end

End

*Description:* Allows marking for end of column.

*Source paragraph:*

*Content Model:* EMPTY

procedure

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
None			

# endcond

End condition

*Description:* Allows marking for end of column.

*Source paragraph:*

*Content Model:* EMPTY

procedure

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description

pagetype	(5X3   5X325 #IMPLIED   5X35   5X375   5X4   5X425   5X45     5X475   5X5   5X525   5X55   5X575   5X6   5X625   5X65   5X675   5X7   5X725   5X75   5X775   5X8   5X825   5X85   5X875   5X9)	Attribute for choosing the page size/type of checklist after the end of the Other Considerations page.
----------	--	--

# entry

## Table Entry

*Description:* Identifies a table entry (cell).

*Source paragraph:* 4.2.7

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | randlist | deflist | seqlist | warning |  
caution | note)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
colname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Allows you to identify a name for each column.
spanname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Allows you to identify a name for each span.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
morerows	<b>NUMBER</b>	<b>0</b>	Allows you to define a vertical span on entries within a table.
colsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Toggle switch to determine if column separators appear in a table. Colsep=1 means column separators will appear.
rowsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Toggle switch to determine if row separators appear in a table. rowsep=1 means column separators will appear.
rotate	<b>%YESORNO;</b>	<b>0</b>	Toggle switch to rotate the contents of the entry 90 degrees.
valign	( <b>TOP   MID-DLE   BOT-TOM</b> )	<b>#IMPLIED</b>	Defines the vertical alignment of text within a cell.
align	( <b>LEFT   RIGHT   CENTER   JUSTIFY   CHAR</b> )	<b>#IMPLIED</b>	Defines the horizontal alignment of text within a cell.
charoff	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Determines the distance the cell content should offset from the horizontal alignment character.
char	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the alignment character that can be used to align values within a column.

security	(U   C   S   N) N	Identifies security level of the document
----------	-------------------	---

## entrytbl

### Entry Table

**Description:** Identifies a table within a table entry. This element allows a table cell to be divided into a sub-table, with its own set of rows, columns, and entries. Use of this element basically allows the author to create a table within a table.

**Source paragraph:** 4.2.7

**Content Model:** (colspec\*, spanspec\*, thead?, tbody) -(entrytbl)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
cols	<b>NUMBER</b>	<b>#REQUIRED</b>	Allows you to define the number of columns.
colname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Allows you to identify a name for each column.
spanname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Allows you to define a name for each span that is defined for the table.
colsep	<b>%YESORNO; #IMPLIED</b>		Allows you to include a vertical line to separate columns. A value of 1. for this attribute will generate column separators.
rowsep	<b>%YESORNO; #IMPLIED</b>		Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.
align	<b>LEFT RIGHT CENTER JUSTIFY CHAR</b>		Allows the author to align text within the cell.
charoff	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Determines the distance the cell content should offset from the horizontal alignment character.
char	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the alignment character that can be used to align values within a column.
security	(U   C   S   N) N		Identifies security level of the document

## esds

### Electrostatic Discharge Sensitive Symbol

**Description:** Identifies the ESDS symbol. Use of this element will cause the ESDS symbol to appear at that point in the running text. The esds attribute should be used to place the ESDS symbol between a paragraph/step number and text.

**Source paragraph:** 4.3.10.4

**Content Model:** EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# etitle

## Emergency title

*Description:* Allows for a tab title to be added at the bottom of the recto pages.

*Source paragraph:*

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# expcont

## Export Control Notice

*Description:* Identifies the export control notice on the title page. Note that the export control notice entity (expcontnot) may be used in place of entering the text manually.

*Source paragraph:* 4.5.1.12

*Content Model:* (#PCDATA) +(emphasis)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# extref

## External Reference

*Description:* Generates a reference to an external document.

*Source paragraph:* 4.3.1m

*Content Model:* EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
targetdoc	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the external document that you are referencing. This value should equal an ID specified in the List of Related Publications. For implementing external references in digital data - this ID must equal the ID of the external document.
targetid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides the ID for the element being referenced in the external document. The value of this attribute should equal the ID of an element in the referenced document.

displayvalue	<b>CDATA</b>	<b>#IMPLIED</b>	If the author needs to add additional, unique information for purposes of referencing an external document, this attribute should be tagged. This attribute should be used for providing paragraph titles, system numbers, task numbers and for author-generated TO numbers where applicable.
HyTime	<b>NAME #FIXED</b>	<b>CLINK</b>	Used in combination with HyTime to establish contextual link.
HyNames	<b>CDATA #FIXED</b>	<b>LINKEND XREFID</b>	Used in combination with HyTime to establish contextual link.

---

## fcP

### Fracture Critical Parts

*Description:* Identifies the fracture critical parts.

*Source paragraph:* 4.3.8.5

*Content Model:* EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## figno

### Figure Number

*Description:* Identifies the figure number within the illustration list when the illustration list is manually tagged.

*Source paragraph:* NONE

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## figtable

### Table within a figure

*Description:* Identifies a table contained within a figure, which does not have a table number or name, and does not appear in the list of tables. An example would be a component table on a schematic diagram.

*Source paragraph:* 4.3.9.1

*Content Model:* (tgroup+) -(figure | table | foldout) +(tfoot|tfnref|tfnisplay)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
frame	<b>TOP BOTTOM TOPBOT ALL SIDES NONE</b>	<b>#IMPLIED</b>	Defines the frame for the table.
colsep	<b>%YESORNO; 1</b>		Allows you to include a vertical line to separate columns. A value of 1. for this attribute will generate column separators.
rowsep	<b>%YESORNO; 0</b>		Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.
tbwidth	<b>NUTOKEN</b>	<b>#IMPLIED</b>	
tbdepth	<b>NUTOKEN</b>	<b>#IMPLIED</b>	
horrefpt	<b>(LEFT   RIGHT)</b>	<b>LEFT</b>	Defines the horizontal reference point for the table.
verrefpt	<b>(VTOP   VBOTTOM)</b>	<b>VTOP</b>	Defines the vertical reference point for the table.
coordst	<b>CDATA</b>	<b>0,10000</b>	Ability to define the coordinates to start the table.
assocfig	<b>IDREF</b>	<b>#IMPLIED</b>	Provides a means to add the id to an associated figure.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document
landscape	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows landscape page

## figure

### Figure

*Description:* Identifies an illustration.

*Source paragraph:* 4.2.8

*Content Model:* (title, ((subfig, subfig+)|((graphic, legend?)|figtable)+)) -(figure | table | foldout)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
pgwide	<b>%YESORNO; 1.</b>		Defines whether the figure will fill the entire width of the page.
orient	<b>(PORT   LAND)</b>	<b>PORT</b>	Defines the orientation of the figure.
legend	<b>%YESORNO; 0</b>		This attribute is set to 1 when a legend is tagged as part of the figure.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.

---

## foldout

### Foldout

*Description:* Identifies a foldout.

*Source paragraph:* 4.2.4.1

*Content Model:* (title, ((subfig, subfig+)|((graphic, legend?)|figtable)+)) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
pgstyle	11X17   11X20.5   11X24   11X27.5   11X31   11X34.5   11X38   11X41.5   11X45		Defines the pagesize for the foldout.
blankapron	%YESORNO;	1.	Toggle to indicate whether the foldout includes a blank apron. A value of 1. indicates that the foldout will have a blank apron.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
pgwide	%YESORNO;	1.	Defines whether the figure will fill the entire width of the page.
orient	(PORT   LAND)	PORT	Defines the orientation of the figure.
legend	%YESORNO;	0	This attribute is set to 1 when a legend is tagged as part of the figure.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

# foldsect

## Foldout Section

*Description:* Identifies the area where foldouts are placed when they are included at the end of the manual. This element is not marked as a chapter or section, but is merely a placeholder for the foldouts.

*Source paragraph:* 4.2.4.1d

*Content Model:* (foldout+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# foreword

## Foreword

*Description:* Identifies the foreword of the manual. This element is identical to the preface and introduction elements, with the exception of the FOSI-generated title for that portion of the manual.

*Source paragraph:* 4.5.9

*Content Model:* (para0, (para0 | applicdef | symsect | abbrsect | internatlstd | tctolist | ratddesc)\*, tmimprep?) +(figure | table)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# front

## Front Matter

*Description:* Identifies the front matter of the manual.

*Source paragraph:* 4.5

*Content Model:* (idinfo, lep, verstat?, intro) +(w | c | ftnote)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
t2page	<b>%YESORNO; 0</b>		A toggle that allows the author to turn the second title page on if necessary.
numcols	<b>1 2</b>		Allows the author to define the page format as one or two columns for this section of the manual.

---

# ftnote

## Footnote

**Description:** Identifies footnotes to paragraphs and tables. The footnote appears on the same page that the corresponding footnote reference (ftnref) occurs. Only the footnote whose id matches the xrefid specified in the footnote reference will appear. Footnotes to text will be displayed at the bottom of the page where the footnote is referenced

**Source paragraph:** 4.3.1n, 4.2.2

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | randlist | deflist | seqlist)+) -(ftnote | ftnref | figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#REQUIRED</b>	This allows you to identify each element and later reference it by its id value.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# ftnref

## Footnote Reference

**Description:** Identifies a reference to a footnote. This element will cause the footnote number/letter/symbol to appear at the point in the text where used, and will cause the footnote number/letter/symbol and the footnote text to appear at the bottom of the page.

**Source paragraph:** 4.3.1n

**Content Model:** EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
xrefid	<b>IDREF</b>	<b>#REQUIRED</b>	Defines the ID of the element that you are referencing. The value of this attribute should match the value of an ID attribute elsewhere in the manual.
mark	<b>NUM SYM ALPHA</b>		Indicates the type of symbol or mark used to indicate a footnote.

---

# glossary

## Glossary

**Description:** Identifies the glossary of the manual.

**Source paragraph:** 4.2.9.7

Content Model: ((letter?, glosslist)+)

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

## glosslist

### Glossary List

Description: Container element for the glossary list of definitions and terms.

Source paragraph: NONE

Content Model: (letter?, (term, def))+

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## graphic

### Graphic

Description: Identifies a graphic within a figure, or a graphic within running text or tables. If used within running text, no figure number or title will be generated. Note that the HCP and ESDS symbols can be placed in running text by using the hcp and esds elements. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: NONE

Content Model: EMPTY

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
boardno	<b>ENTITY</b>	<b>#REQUIRED</b>	Allows the author to place the graphic name here.

graphsty	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Graphic style
llcordra	<b>CDATA</b>	<b>#IMPLIED</b>	Lower left world coordinates (1,1). If scalefit=0 and repropwid is not specified default is lower left.
rucordra	<b>CDATA</b>	<b>#IMPLIED</b>	Upper right world coordinates (10000,10000). If scalefit=0 and reprodep is not specified default is upper right.
repropwid	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies the horizontal dimension of a graphic bounding box (width).
reprodep	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies the vertical dimension of a graphic bounding box (depth).
hscale	<b>NUMBER</b>	<b>#IMPLIED</b>	Horizontal Scaling
vscale	<b>NUMBER</b>	<b>#IMPLIED</b>	Vertical Scaling
scalefit	<b>NUMBER</b>	<b>#IMPLIED</b>	Scale to fit. No affect if hscale and vscale set to zero.
color	<b>NUMBER</b>	<b>0</b>	Option to choose color.
coordst	<b>CDATA</b>	<b>#IMPLIED</b>	Specifies coordinate to start graphic.
coordend	<b>CDATA</b>	<b>#IMPLIED</b>	Specifies coordinate to end graphic.
icon	<b>(YES NO)</b>	<b>NO</b>	Specifies whether the graphic is full size or icon. Specifying icon will eliminate the textbrk surrounding the graphic.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## hazmat

### Hazardous Material Name

*Description:* Identifies the hazardous material name used with a hazardous material warning icon.

*Source paragraph:* 4.3.10.1

*Content Model:* (#PCDATA)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## hci

### Hardness Critical Item

*Description:* Identifies the HCI symbol. Use of this element will cause the HCI symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the HCI symbol in a paragraph. The hci attribute should be used to place the HCI symbol between a paragraph/step number and text.

*Source paragraph:* 4.3.8.3.1 (MIL-STD 38784A DRAFT)

*Content Model:* EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## hcp

### Hardness Critical Process Symbol

*Description:* Identifies the HCP symbol. Use of this element will cause the HCP symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the HCP symbol in a paragraph. The hcp attribute should be used to place the HCP symbol between a paragraph/step number and text.

*Source paragraph:* 4.3.10.3.1

*Content Model:* EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## heading

### Heading

*Description:* Defines the heading for the Coordinated Procedures table

*Source paragraph:* 3.2.12.3

*Content Model:* crewpos1, crewpos2, crewpos3?, crewpos4?, crewpos5?

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## icon

### Hazardous Material Warning Icon

*Description:* Identifies the hazardous material warnings. The hazardous material warning consists of a graphic(s) (e.g. fire icon, poison icon, etc.), the hazardous material name, and the sequence number which identifies the order in which the hazardous material warnings are included in the safety summary. See Appendix A for further information on hazardous material warnings.

*Source paragraph:* 4.3.10.1

*Content Model:* (graphic+, hazmat, seqno)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

---

## idinfo

### Identification Information (Title Page)

*Description:* Identifies the title page and cover (if used) of the manual.

*Source paragraph:* 4.5.1

*Content Model:* (tmidno+, (chgnum, chgdate, chghistory)?, pretmidno\*, volnum?, revnum?, crewpos, doctype, maintlvl?, prtitle, subtitle?, (mfr+, contractno+)?, seal?, supersed?, suppl\*, effdatenot?, volnot?, discl?, distrib, exp-cont?, destr?, para?, copyright\*, cogact?, moveddata?, authnot, downgrd?, pubdate)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
tmidnolen	<b>NUTOKEN</b>	<b>10EM</b>	Specifies potential length for the T.M. ID number.

---

## ifthen

*Description:* Container element for "parallel" procedures. Added the container element to facilitate auto-numbering. This automatic process is still under construction.

*Source paragraph:* NONE

*Content Model:* (if, warning\*, caution\*)

procedure

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ilink

### Independet Link

*Description:* One of several HyTime elements. Used in a situation of indirection where a specific ID is not declared in an external document and must be declared using nameloc and nmlist elements.

*Source paragraph:*

*Content Model:* (PCDATA)\*

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
linkends	<b>CDATA</b>	<b>#IMPLIED</b>	References the linkends declared within a nameloc element. Other attributes are not included because at this time - they are not applicable during a period of alpha test and will be added to the TDT as the options are explored and implemented.
anchrole	<b>CDATA</b>	<b>#REQUIRED</b>	Defines the anchor role assumed by the independent link. Used in combination with HyTime.

---

## illuslist

### List of Illustrations

*Description:* Identifies the list of illustrations in the manual. This information is automatically compiled by the FOSI. If this element is not used, no list of illustrations will appear in the manual.

*Source paragraph:* 4.5.7

*Content Model:* (figno, title, pageno)\*

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## index

### Index

*Description:* Identifies the index.

*Source paragraph:* 4.2.9.8

*Content Model:* (letter?, (preentry, secentry\*))+

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# insertpg

## Insert Page Column Entry

*Description:* Identifies an entry within the Insert Page column on the change instruction sheet.

*Source paragraph:* 4.7.3.10.2

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# internatlst

## International Standardization Agreement Note

*Description:* Identifies the international standardization agreement note. The paragraph number and title, of this note will be automatically generated by the FOSI.

*Source paragraph:* 4.5.9.1

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

# intro

## Introduction

**Description:** Identifies the introduction of the manual. This element is identical to the preface and foreword elements, with the exception of the FOSI-generated title for that portion of the manual.

**Source paragraph:** 4.5.9

**Content Model:** (para0, (para0 | applicdef | symsect | abbrsect | internatlstd | tctolist | ratddesc)\*, tmimprep?) +(figure | table)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# ipbassy

## Assembly

**Description:** Identifies the assembly tag used in the MPL

**Source paragraph:** 3.6.4 MIL-PRF-38807

**Content Model:** EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# ipbcage

## Commercial and Government Entity

**Description:** Identifies the design activity or government agency whose number appears in the part number column of the MPL.

**Source paragraph:** 3.6.7.3 MIL-PRF-38807

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# ipbchap

## Illustrated Parts Breakdown Chapter

*Description:* Identifies the Illustrated Parts Breakdown Chapter

*Source paragraph:* 4.11 (MIL-STD-38784A DRAFT)

*Content Model:* (ipbfwordchap, ipbpl, ipbnumindx?, ipbrfdsindx?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

# ipbdesc

## Description

*Description:* Identified the description of each part listed in the MPL.

*Source paragraph:* 3.6.7.4 MIL-PRF-38807

*Content Model:* (nomen, ipbrefdes\*, ipbsssn\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# ipbesdsdesc

## IPB Electrostatic Discharge Sensitive

*Description:* Identifies the esds in the IPB foreword

*Source paragraph:* 3.5.11 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1. All paragraphs which address fracture critical processes shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## ipbfigindex

### Figure and Index Number

*Description:* Identifies the figure and index numbers in the MPL, the reference Index and the numerical index.

*Source paragraph:* 3.6.7.1, 3.7.2.2, 3.8.2.2 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ipbfigureno

### Figure and Index Number

*Description:* Identifies the figure and index numbers in the MPL, the reference Index and the numerical index.

*Source paragraph:* 3.6.7.1 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# ipbfinding

## Finding

**Description:** Tag used for finding part numbers, illustrations, and descriptions.

**Source paragraph:** 3.5.3 MIL-PRF-38807

**Content Model:** (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

deltypes	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

# ipbwordchap

## Illustrated Parts Breakdown Foreword

*Description:* Identifies the first section of the ipb chapter

*Source paragraph:* 3.5 MIL-PRF-38807

*Content Model:* ((para0+, ipbmodelcover, ipbserialization?, ipbfinding?, ipbsimassem?, ipbquickchgexpl?, ipbshtnoexpl?, ipbuseonexpl, ipbsmrexpl, ipbhcidesc?, ipbesdsdesc?, ipbpartstd, ipbmfrlist?, para0\*)) +(figure|table)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
deltypes	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.

revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## ipbgroup10

### Group 10

*Description:* Tag used to create a space beneath every tenth listing in the reference and numerical indexes

*Source paragraph:* 3.7.2, 3.8.2 MIL-PRF-38807

*Content Model:* EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## ipbhcidesc

### IPB hardness Critical Items

*Description:* Identifies the HCI in the IPB foreword

*Source paragraph:* 3.5.10 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.

ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## ipbmfrlist

### Manufacturer List

*Description:* Identifies the manufacturer list in the ipb foreword

*Source paragraph:* 3.5.13 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subparal\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.

id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

# ipbmodelcover

## Model Covered

**Description:** Identifies the model(s) covered by the manual in the ipb foreword

**Source paragraph:** 3.5.1 MIL-PRF-38807

**Content Model:** (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the <b>*** HCP ***</b> symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the <b>*** OCP ***</b> symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the <b>*** OCI ***</b> symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

deltype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## ipbnumgrp

### Numerical Group

*Description:* Container tag for the numerical index.

*Source paragraph:* 3.7 MIL-PRF-38807

*Content Model:* ((partno, ipbfigindex)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ipbnumindx

### Numerical Index

*Description:* Identifies the third section in the ipb chapter.

*Source paragraph:* 3.7 MIL-PRF-38807

*Content Model:* (ipbnumgrp) +(ipbgroup10)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
cols	<b>2 3</b>		Defines the number of columns desired for the numerical index table.
autobuild	<b>NUMBER</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.<
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
security	(U   C   S   N) N		Identifies security level of the document

## ipbpartname

### Part Name

*Description:* Identifies the name of the part in the MPL.

*Source paragraph:* 3.6.7.4 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

## ipbpartnosym

### Illustrated Parts Breakdown Part Number Symbol

*Description:* Identifies the part number symbol that appears in the part number column of the Maintenance Parts List.

*Source paragraph:* NONE

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## ipbpartstd

### Parts Standardization

*Description:* Identifies a required paragraph in the ipb foreword.

*Source paragraph:* 3.5.12 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

# ipbpl

## Maintenance Parts List

*Description:* Identifies the second section in the ipb chapter.

*Source paragraph:* 3.6 MIL-PRF-38807

*Content Model:* (ipbplgrp+) +(ipbplbrk)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

# ipbpl0

## Parts list - Indenture 0

**Description:** Indents the first nonindenture in the description column of the MPL

**Source paragraph:** 3.6.7.4.1 MIL-PRF-38807

**Content Model:** ((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmrcodes, remarks?)+)+, ipbpl1\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
deltypes	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.
marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.

---

## ipbplbrk

### Parts List Break

**Description:** Tag used to put a break in the MPL

Source paragraph: MIL-PRF-38807

Content Model: EMPTY

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## ipbplgrp

### Parts List Group

Description: Container tag for the parts list.

Source paragraph: MIL-PRF-38807

Content Model: (figure, ipbpl0tbl, ipbuseonodelist?)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## ipbpl0tbl

### Parts list table

Description: Identifies the parts list table

Source paragraph: 3.6.7 MIL-PRF-38807

Content Model: (ipbpl0+)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## ipbpl1

### Parts List - Indenture 1

Description: Identifies the first indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl2\*)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.
marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## ipbpl2

### Parts List - Indenture 2

*Description:* Identifies the second indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

*Content Model:* (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl3\*)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.

marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## ipbpl3

### Parts List - Indenture 3

*Description:* Identifies the third indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

*Content Model:* (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl4\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.
marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## ipbpl4

### Parts List - Indenture 4

*Description:* Identifies the fourth indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

*Content Model:* (( (ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmrcodes, remarks?)+)+), ipbpl5\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.
marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type

inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## ipbpl5

### Parts List - Indenture 5

*Description:* Identifies the fifth indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

*Content Model:* (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmrcodes, remarks?)+)+), ipbpl6\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sepmanual	<b>NUMBER</b>	<b>0</b>	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	<b>NUMBER</b>	<b>0</b>	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is attached.
marking	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the part is marked.
kit	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	<b>NUMBER</b>	<b>0</b>	Toggle switch to indicate whether the item has a quick change explanation.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
deltypes	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

# ipbpl6

## Parts List - Indenture 6

*Description:* Identifies the sixth indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

*Content Model:* (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmrcodes, remarks?)+)+), ipbpl6\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sepmanual	NUMBER	0	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	NUMBER	0	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	NUMBER	0	Toggle switch to indicate whether the part is attached.
marking	NUMBER	0	Toggle switch to indicate whether the part is marked.
kit	NUMBER	0	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	NUMBER	0	Toggle switch to indicate whether the item has a quick change explanation.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
deltypes	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Allows you to specify the status of this element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

# ipbpl7

## Parts List - Indenture 7

*Description:* Identifies the seventh indenture in the description column of the MPL.

*Source paragraph:* 3.6.7.4.1 MIL-PRF-38807

**Content Model:** ((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sepmanual	NUMBER	0	Defines whether the mpl table is a separate manual from 38784 or is combined as part of 38784.
shown	NUMBER	0	Specifies whether the item appears in the Illustrated Parts Breakdown illustration.
attachpart	NUMBER	0	Toggle switch to indicate whether the part is attached.
marking	NUMBER	0	Toggle switch to indicate whether the part is marked.
kit	NUMBER	0	Toggle switch to indicate whether the item is part of a kit.
quickchgexpl	NUMBER	0	Toggle switch to indicate whether the item has a quick change explanation.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Allows you to specify the status of this element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## ipbquickchgexpl

### Quick Change Explanation

**Description:** Identifies the parts in kits or quick change units paragraph in the ipbforeword.

**Source paragraph:** 3.5.5 MIL-PRF-38807

**Content Model:** (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	NUMBER	0	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.

id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

---

# ipbrefdes

## Reference Designator

*Description:* Identifies the first column of the Reference Designator Index.

*Source paragraph:* 3.6.7.4, 3.8.2.1 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# ipbrfdgrp

## Reference Designator Group

*Description:* Container tag for the reference designator index.

*Source paragraph:* 3.8 MIL-PRF-38807

*Content Model:* ((ipbrefdes?, ipbsssn?, ipbfigindex)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# ipbrfdsindx

## Reference Designator Index

*Description:* Identifies the fourth section of the ipb chapter.

*Source paragraph:* 3.8.1 MIL-PRF-38807

*Content Model:* (ipbrfdgrp) +(ipbgroup10)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>NUMBER</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
type	<b>REFDES SSSN <del>REFDES</del></b>		Defines whether the reference designator index includes the refdes element, the sssn element or both.
cols	<b>2 3</b>		Defines the number of columns for the reference designator index.

sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

# ipbserialization

## Serialization

*Description:* Identifies the serialization paragraph in the ipb foreword.

*Source paragraph:* 3.5.2 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*, ipbsertable)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.

hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## ipbserialtable

### Serialization Table

*Description:* Identifies the serialization table in the ipb foreword.

*Source paragraph:* 3.5.2 MIL-PRF-38807

*Content Model:* (title?, (nomen, modelno, serno)+)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
tabstyle	<b>NMTOKEN</b>	<b>#IMPLIED</b>	
cellcont	<b>CONTINUED   CONT</b>	<b>CONTINUED</b>	Specifies whether cell contents can be continued.
ID	<b>ID</b>	<b>#IMPLIED</b>	Provides means to specify an ID number for the table.
footnotes	<b>PAGE   END</b>	<b>#IMPLIED</b>	Allows you to specify whether table footnotes appear at the end of the table or at the end of the page.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Specifies all IDs of elements or data items that have an applicable reference.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
col1width	<b>CDATA</b>	<b>1.75IN</b>	Specifies the value for column1 width.
col2width	<b>CDATA</b>	<b>1.25IN</b>	Specifies the value for column1 width.

## ipbshtnoexpl

### Sheet Number Explanation

*Description:* Identifies the sheet number explanation in the ipb foreword.

*Source paragraph:* 3.5.7 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subparal\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated

status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N)	N	Identifies security level of the element.

# ipbsimasse

## Similar Assemblies

*Description:* Identifies the listing of similar assemblies in the ipb foreword.

*Source paragraph:* 3.5.4 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	NUMBER	0	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.

label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

## ipbsmrcode

### Source, Maintenance, and Recoverability (SMR) Codes

*Description:* Identifies the SMR codes in the MPL.

*Source paragraph:* 3.6.7.7 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## ipbsmr codes

### Source, Maintenance, and Recoverability (SMR) Codes

*Description:* Container element for the SMR codes.

*Source paragraph:* 3.6.7.7 MIL-PRF-38807

*Content Model:* (ipbsmr code)+

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# ipbsmrexp

Source, Maintenance, and Recoverability (SMR) code explanation.

*Description:* Identifies the SMR codes in the ipb foreword.

*Source paragraph:* 3.5.9 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## ipbsssn

### System, subsystem Sub-Subsystem Number

*Description:* Identifies the SSSN in the reference designator index.

*Source paragraph:* 3.6.7.4 & 3.8.2.1 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## ipbunits

### Units

*Description:* Identifies the units per assembly column in the MPL

*Source paragraph:* 3.6.7.5 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

security	(U   C   S   N) N	Identifies security level of the document
----------	-------------------	---

# ipbuseoncode

Usable on code

*Description:* Identifies the useable on code column in the MPL.

*Source paragraph:* 3.6.7.6 MIL-PRF-38807

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

# ipbuseonodelist

Usable on code list

*Description:* Identifies the usable on code list at the end of the MPL.

*Source paragraph:* 3.6.7.6 MIL-PRF-38807

*Content Model:* (term, def)+ +(note)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.

revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
--------	--------	---	--

# ipbuseonexpl

Usable on code explanation

*Description:* Identifies the useable on code paragraphs in the ipb foreword

*Source paragraph:* 3.5.8 MIL-PRF-38807

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	NUMBER	0	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## item

### Item

*Description:* Identifies an item within a list. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

*Source paragraph:* NONE

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## legend

### Legend

*Description:* A tabular listing of the index numbers/letters and their meanings.

*Source paragraph:* 4.6.17

*Content Model:* tabmat

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## lep

### List of Effective Pages (LEP)

*Description:* Identifies the list of effective pages for the manual.

*Source paragraph:* 4.5.3

*Content Model:* lepcontents

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## lepcontents

### LEP Contents

*Description:* Contains the entries for the lep. The fosi automatically can generate this.

*Source paragraph:* 4.5.3

*Content Model:* (lepentry)+

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

---

## lepentry

### LEP Entry

*Description:*

*Source paragraph:* 4.5.3

*Content Model:* leppage, lepchg

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# lepchg

## LEP Change

*Description:*

*Source paragraph:* 4.5.3.1

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# leppage

## LEP Page

*Description:*

*Source paragraph:*

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# letter

## Leter

*Description:* Letter heading for the index.

*Source paragraph:* 4.2.9.8

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# line

## Line

**Description:** This element is used to indicate that a column or line should be forced at that point.

**Source paragraph:** N/A

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
prespace	<b>CDATA</b>	<b>#IMPLIED</b>	Allows the authour to set amount of space before/above the line used.
postspace	<b>CDATA</b>	<b>#IMPLIED</b>	Allows the authour to set amount of space before/above the line used
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
quad	<b>LEFT   CENTER   RIGHT   JUSTIFY</b>	<b>LEFT</b>	Specifies quadding option for the line.
indent	<b>CDATA</b>	<b>#IMPLIED</b>	Specifies how much indentation is set on the line.

---

## location

### Location (Not Used; Under Review)

**Description:** Identifies the placement of a floating object such as a figure, table or figure table. This element is globally included on the document element.

**Source paragraph:** N/A

**Content Model:** EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
xrefid	<b>IDREF</b>	<b>#IMPLIED</b>	Defines the ID of the element that you are referencing. The value of this attribute should match the value of an ID attribute elsewhere in the manual.

---

# Irp

## List of Related Publications

**Description:** Identifies the paragraph used to list related publications and the associated list.

**Source paragraph:** 4.5.9.2

**Content Model:** (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*, lrptable?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
ltermwidth	<b>NU TokEN</b>	<b>1.63IN</b>	Allows you to define the left term width.
rtermwidth	<b>NU TokEN</b>	<b>1.9IN</b>	Allows you to set the right term width.
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcP	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hCP	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hCI	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
oCP	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oCI	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.

indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
deltype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## Irpreentry

### List of Related Publications Entry

*Description:* Identifies an entry in the list of related publications. When the value of the id attribute is specified via the xrefid attribute of the xref element, the title of the publication appears.

*Source paragraph:* 4.5.9.2

*Content Model:* ((partno|(modelno|typedes))\* , tmidno+ , title)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

---

## Irptable

### List of Related Publications Table

*Description:* Container element for the list of related publications table.

*Source paragraph:* 4.5.9.2

*Content Model:* lrpreentry+

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## maintlvl

### Maintenance Level

*Description:* Identifies the maintenance level of the manual (e.g. organizational, intermediate, depot, etc.) on the title page.

*Source paragraph:* 4.5.1.3.3

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mfr

### Manufacturer

*Description:* Identifies the manufacturer of the equipment on the title page.

*Source paragraph:* 4.5.1.3.6

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## modelno

### Model Number

*Description:* Identifies the model number of the equipment on the title page or difference data sheet.

*Source paragraph:*

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N)	N	Identifies security level of the document

---

## modreq

### Modification Request (Not Used; Under Review)

*Description:* The modification request element identifies a marking which document editors may place into the document instance to indicate where modification should be made. The element is used only in the review process and will not be used during document composition.

*Source paragraph:* 4.5.1.3.4, 4.7.3.3

*Content Model:* mrinfo?, mrmod, mrrespns?

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
xref	NMTOKEN	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
refpos	(PREXREF   POSTXREF   XREF)	XREF	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
by	CDATA	#REQUIRED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
date	CDATA	#REQUIRED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.

organiz	NMTOKEN	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
orgcat	NMTOKEN	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
cmntrcat	NMTOKEN	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
priority	(1 2 3 4 5)	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
category	NMTOKEN	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
topic	CDATA	#IMPLIED	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.

---

## movedata

### Moved Data

*Description:* Provides a means to identify the type of information that will appear on the T-2 page when the title page overflows.

*Source paragraph:* NONE

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrchgtxt

### Modification Request Change Text (Not Used; Under Review)

*Description:* Identifies the modification request change text used to indicate editorial changes during document production. The element is used only in the review process and will not be used during document composition.

*Source paragraph:*

*Content Model:* ANY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

chgloc	<b>NUMBER</b>	<b>#IMPLIED</b>	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
chglen	<b>NUMBER</b>	<b>#IMPLIED</b>	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.
action	<b>IN-SERT DELETE REPLACE</b>	<b>REPLACE</b>	Attribute is used to specify information about the modification request. This attribute is not supported by the FOSI at this time. The element is under review.

---

## mrngenmod

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** (mrpara | mrlist)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrinfo

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** ANY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrinstr

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** (mrpara | mrlist)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mritem

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrlist

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** (mritem+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrmod

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** (mrreason?, (mrgenmod|(mrinstr?, mrchgtxt)))

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrpara

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrreason

(Not Used; Under Review)

**Description:** This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

**Source paragraph:**

**Content Model:** (mrpara | mrlist)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## mrrespns

(Not Used; Under Review)

*Description:* This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

*Source paragraph:*

*Content Model:* (mrpara|mrlist)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
disposn	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Attribute currently not supported by the FOSI. The element and attribute are under review.
status	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Attribute currently not supported by the FOSI. The element and attribute are under review.

---

## nameloc

### Name Location - HyTime Element

*Description:* One of several elements added to facilitate use of HyTime. This element serves as a locator for external references and contains several nmlist elements. Useful for referncing objects that do not have the traditional SGML id.

*Source paragraph:*

*Content Model:* (nmlist)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
HyBase	<b>NAME #FIXED</b>	<b>NAMELOC</b>	Assigns nameloc as the HyBase attribute.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

---

## newpos1

### New Position 1

*Description:* Identifies the new crew position for column 1 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

# newpos2

## New Position 2

*Description:* Identifies the new crew position for column 2 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# newpos3

## New Position 3

*Description:* Identifies the new crew position for column 3 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# newpos4

## New Position 4

*Description:* Identifies the new crew position for column 4 of the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# newpos5

## New Position 5

*Description:* Identifies the new crew position for column 5 of the Coordinated Procedures Table  
*Source paragraph:* 3.2.12.3  
*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## nmlist

### Name List - HyTime Element

*Description:* One of several elements added to facilitate use of HyTime. This element serves as a description of the location of the entity or element reference in the nameloc element. Useful for referncing objects that do not have the traditional SGML id and/or entities that reside in external documents.

*Source paragraph:*

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
nametype	<b>(ENTITY ELEMENT ENTITY)</b>		Identifies whether the external reference is an element or entity.
docorsub	<b>ENTITY</b>	<b>#IMPLIED</b>	Defines the entity name of the external document as declared in the entity declarations at the top of the tagged instance. Other attributes are not included because at this time - they are not applicable during a period of alpha test and will be added to the TDT as the options are explored and implement.
HyBase	<b>NAME #FIXED</b>	<b>NMSPLOC</b>	Used in conjunction with HyTime to set up independent and contextual links.
impsrc	<b>NAME #FIXED</b>	<b>GROVERT</b>	Used in conjunction with HyTime to set up independent and contextual links.
HyBnames	<b>CDATA #FIXED</b>	<b>LOCSRC DOCOR-SUBNAMESPC NAMETYPE#MAPTOKEN ELEMENTS ELEMENT#MAPTOKEN ENTITIES ENTITY</b>	Used in conjunction with HyTime to set up independent and contextual links.
notspace	<b>NAME</b>	<b>ERROR</b>	Used in conjunction with HyTime to set up independent and contextual links.
notname	<b>NAME</b>	<b>ERROR</b>	Used in conjunction with HyTime to set up independent and contextual links.
notprop	<b>NAME</b>	<b>ERROR</b>	Used in conjunction with HyTime to set up independent and contextual links.
direct	<b>(DIRECT INDIRECT INDIRECT)</b>		Used in conjunction with HyTime to set up independent and contextual links.
locsrc	<b>CDATA</b>	<b>#IMPLIED</b>	Used in conjunction with HyTime to set up independent and contextual links.
cantcnst	<b>NAME</b>	<b>ERROR</b>	Used in conjunction with HyTime to set up independent and contextual links.

---

# nomen

## Nomenclature

*Description:* Identifies the nomenclature of the equipment on the title page and the difference data sheet.

*Source paragraph:* 4.5.1.3.4 & 4.7.3.3.1

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure  
| table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# none

## None

*Description:* Allows you to opt for none instead of having the tpdrtbl.

*Source paragraph:*

*Content Model:* EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# normproccl

## Normal Procedures Checklists

*Description:* Checklists for all normal procedures from flight manual.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.6

*Content Model:* (title, secttoc, procedure+, told?) -(ifstep1) +(figure | figtable | table)  
docfmcl

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

delttype	"DELETE   REAL   RESERVE   NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY   DELETED   RESERVED   NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY   DELETED   RESERVED   NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
landscape	NUMBER	#IMPLIED	Allows landscape page

## note

### Note

*Description:* Identifies a NOTE in the manual.

*Source paragraph:* 4.3.10

*Content Model:* (para\*) -  
(randlist|deflist|seqlist|figure|table|foldout|precaut|warning|caution)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## nsn

### National Stock Number

*Description:* Identifies the national stock number of the equipment on the title page.

*Source paragraph:* 4.5.1.3.4

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## nsp

*Description:* Identifies the nsp symbol. Use of this element will cause the nsp symbol to appear at that point in the running text. The nsp attribute should be used to place the nsp symbol between a paragraph/step number and text.

*Source paragraph:* 4.3.10.21

*Content Model:* EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## oadr

### Official Authority Downgrade Review Notice

*Description:* Identifies the official authority downgrade review notice on the title page. This notice is used only on classified manuals.

*Source paragraph:* 4.4 & 4.5.1.10

*Content Model:* #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## object

### Multimedia Object

*Description:* Developed for use in interactive manuals to evoke multimedia applications.

*Source paragraph:*

Content Model: (param)\*

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
objectno	<b>ENTITY</b>	<b>#REQUIRED</b>	References the object number of the application being referenced.
reprowid	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Provides width of object being invoked, especially if graphic or foldout from external document.
reprodep	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Provides depth of object being invoked, especially if graphic or foldout from external document.
type	<b>CDATA</b>	<b>#IMPLIED</b>	Provides details about the type of applications being referenced.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# objmedia

## Object Media

*Description:* Developed for use in interactive manuals to evoke multimedia applications. Defines details about the external application being invoked.

*Source paragraph:*

*Content Model:* (title, ((subobjmed, subobjmed+) | object)) -(figure | table | foldout)

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.

label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## oci

### Observable Critical Item

**Description:** Identifies the OCI symbol. Use of this element will cause the OCI symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the OCI symbol in a paragraph. The oci attribute should be used to place the OCI symbol between a paragraph/step number and text.

**Source paragraph:** 4.3.8.6.1 (MIL-STD 38784A DRAFT)

**Content Model:** EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## ocp

### Observable Critical Process

**Description:** Identifies the OCP symbol. Use of this element will cause the OCP symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the OCP symbol in a paragraph. The ocp attribute should be used to place the OCP symbol between a paragraph/step number and text.

**Source paragraph:** 4.3.8.6.1 (MIL-STD 38784A DRAFT)

Content Model: EMPTY

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## pageno

### Page Number

*Description:* Identifies the page number associated with each table/figure that appears in the tablelist or illuslist when the list is manually tagged.

*Source paragraph:* NONE

*Content Model:* #PCDATA

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## para

### Paragraph

*Description:* Identifies text within a paragraph without regard to title, heading, etc. For example, a NOTE consists of a heading and one or more paragraphs.

*Source paragraph:* 4.2.9.5

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | randlist | deflist | seqlist)+)

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
xrefid	<b>IDREF</b>	<b>#IMPLIED</b>	Defines the ID of the element that you are referencing. The value of this attribute should match the value of an ID attribute elsewhere in the manual.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N)</b>	<b>N</b>	Identifies security level of the document

## para0

### Primary Paragraph

*Description:* Identifies a primary paragraph within the manual.

*Source paragraph:* 4.2.9.5.1.1

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.

label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## param

### Parameter

*Description:* Used with Object Media to provide textual information about the application being invoked.

*Source paragraph:*

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## parano

### Paragraph Number

*Description:* Allows tagging of the para number in the section TOC.

*Source paragraph:*

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

NONE
------

---

## paras

### Paragraphs

*Description:* Allows for multiple paragraphs under one symbol group.

*Source paragraph:*

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | randlist | deflist | seqlist)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## paratitle

### Paragraph Title

*Description:* Identifies the paragraph title.

*Source paragraph:* 4.3e

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## partno

### Part Number

*Description:* Identifies the part number of the equipment on the title page and on the difference data sheet.

*Source paragraph:* 4.5.1.3.4 & 4.7.3.3.1b

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
-----------	------	---------	-------------

security	(U   C   S   N) N	Identifies security level of the document
----------	-------------------	---

## performdatacl

### Performance Data Checklists

*Description:* Checklists for all performance data from the Flight Manual.  
*Source paragraph:* MIL-PRF-7700F paragraph 3.7.3  
*Content Model:* (title, secttoc, figure+) +(warning | caution | note)  
docfmcl

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE   REAL   RESERVE   NA"	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
status	"EMPTY   DELETED   RESERVED   NOTAPP"	<b>#IMPLIED</b>	Allows you to specify the status of this element.
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	"EMPTY   DELETED   RESERVED   NOTAPP"	<b>#IMPLIED</b>	Allows you to specify the status of this element.

## pgbrk

### Page Break

*Description:* Identifies where a page will begin. Page breaks can be placed at the top of each logical page to identify where the page should start.  
*Source paragraph:* 4.2.1.1  
*Content Model:* EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
pgnum	<b>CDATA</b>	<b>#IMPLIED</b>	Page number generated by the FOSI during a recomposition. Provides data for OmniMark and DataLogics Composer in the script and change package processing.

pgnumber	<b>CDATA</b>	<b>#IMPLIED</b>	Allows the author to assign the pgnumber.
pgdesc	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
nxtpgnum	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
nxtpgdesc	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
seqnum	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
prefix	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
rectover	<b>NUMBER</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
empty	<b>NUMBER</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
ignore	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
chgstatus	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
prevchgstatus	<b>CDATA</b>	<b>#IMPLIED</b>	Attribute is generated and referenced by the JCALS structure and is incorporated into the instance by the JCALS import process.
chglevel	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Specifies what level of change the manual is on.
emergency	<b>(0   1)</b>	<b>#IMPLIED</b>	If emergency is equal to 1, it will output the emergency border to signify emergency procedures.
shrink	<b>CDATA</b>	<b>#IMPLIED</b>	Used to shrink vertical space so that overflowed text will pull back to the desired page.
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
hyphflag	<b>NUMBER</b>	<b>#IMPLIED</b>	Toggle whether or not hyphen will be used for the last word on the last line.
paraflag	<b>NUMBER</b>	<b>#IMPLIED</b>	Toggle whether or not last para will split.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## pgnumber

### Page Number

*Description:* Identifies the page number.

Source paragraph: 4.2.1.4.2.1

Content Model: #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# phrase

## Downgrade Phrase

*Description:* Identifies the text of the downgrade notice on the title page.

*Source paragraph:* 4.4

*Content Model:* #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# precaut

## Precaution

*Description:* Identifies general safety precautions in the safety summary. The FOSI will automatically place a bullet to the left of each precaution.

*Source paragraph:* 4.5.10.1

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)-(figure | table | foldout | warning | caution | precaut)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

---

# preface

## Preface

*Description:* Identifies the preface of the manual. This element is identical to the foreword and introduction elements, with the exception of the FOSI-generated title for that portion of the manual.

Source paragraph: 4.5.9

Content Model: (para0, (para0 | applicdef | symsect | abbrsect | internatlstd | tctolist | ratddesc)\*, tmimprep?) +(figure | table)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

## preentry

### Primary Index Entry

Description: Used by author to identify primary entries that will be included in the index.

Source paragraph: 4.2.9.8

Content Model: (topic) -(figure | table | foldout)

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

---

## pretmidno

### Previous Technical Manual Identification Number (Not Used; Under Review)

Description: Identifies the previous technical manual identification number of the manual on the title page. This element is used only when the manual number has been changed. The FOSI will automatically generate the Formerly prefix preceding the former manual number.

Source paragraph:

Content Model: #PCDATA

### ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document
service	(AF   NAVAIR   NAVSEA   SPAWARS   ARMY   MC   DLA   CG   DOD) #IMPLIED		Defines the branch of service.

---

## prindex

## Primary Index

*Description:* Identifies a primary alphabetical index topic in the manual.

*Source paragraph:* 4.2.9.8

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+ -  
(secindex))

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
pridnbr	<b>CDATA</b>	<b>#IMPLIED</b>	Defines a unique identification number that allows an association between items tagged as primary index topics and those tagged as secondary index topics.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## procedure

### Checklist Procedure

*Description:* Identifies the group of conditions for each procedure within the normal or emergency procedures.

*Source paragraph:* 3.7.7

*Content Model:* (title?, (para | condition | clstep1 | ifthen)+ +(warning | caution | note |  
syms | end | cont | tabmat))

emergproccl

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.

ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.
newpage	NUMBER	0	Allows procedures to start on a new page when set to '1'.

## procstep

### Procedure Step

*Description:* Defines a procedural step for each task assigned to a crew member in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (para, warning?, caution?, note?)\*, (clstep1+ | condition+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# procstep2

## Procedure Step2

*Description:* Defines a procedural step2 for each task assigned to a crew member in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (para, warning?, caution?, note?)\*, (clstep1+| condition+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# procstep3

## Procedure Step3

*Description:* Defines a procedural step3 for each task assigned to a crew member in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (para, warning?, caution?, note?)\*, (clstep1+| condition+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# procstep 4

## Procedure Step 4

*Description:* Defines a procedural step4 for each task assigned to a crew member in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (para, warning?, caution?, note?)\*, (clstep1+| condition+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# prtitle

## Prime Title

*Description:* Identifies the title of the manual on the title page.

*Source paragraph:* 4.5.1.3e

*Content Model:* ((nomen, (modelno | partno | typedes | pslist | nsn)+, serno\*) | subject)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# pslist

## Part/Serial Number List

*Description:* Identifies a listing on the title page that corresponds a particular part number with associated serial numbers. This element could also be used to correspond model numbers with serial numbers, etc.

*Source paragraph:* 4.5.1.3.4

*Content Model:* (partno, serno+)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# pubdate

## Publication Date

*Description:* Identifies the basic date of the manual on the title page.

*Source paragraph:* 4.5.1.16

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# randlist

## Random List

*Description:* Identifies a random list. All items within the random list will appear unnumbered, on separate lines, in the order they were entered by the author.

*Source paragraph:* NONE

*Content Model:* (title?, item+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
prefix	<b>CDATA</b>	<b>#IMPLIED</b>	If prefix is used, the bullets will not appear that are generally formatted by the fosi.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## ratd

### Record of Applicable Technical Directives

*Description:* Identifies the record of applicable technical directives paragraph and the associated table.

*Source paragraph:* 4.5.9.4

*Content Model:* (ratdentry+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the document

## ratddesc

### Record of Applicable Technical Directives Description

**Description:** Defines the description of the record of applicable technical directives paragraph and the associated table.

**Source paragraph:** 4.5.9.4

**Content Model:** ((title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*), ratd?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	NUMBER	0	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.

oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## ratdentry

### Record of Applicable Technical Directives Table Entry

*Description:* Defines each entry of the Record of Applicable Technical Directives Table.

*Source paragraph:* 4.5.9.4

*Content Model:* ((typeno, date?, title, ecyno?, dateinc?, remarks?)\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type

inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

## rear

### Rear Matter

*Description:* Identifies the rear matter of the manual.

*Source paragraph:* 4.2.9.6, 4.2.9.7, 4.2.9.8, & 4.6

*Content Model:* (appendix\*, glossary?, index?, foldsect?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
numcols	<b>1 2</b>		Allows the author to define the page format as one or two columns for this section of the manual.

---

## remarks

### Remarks Entry

*Description:* Identifies an entry in the remarks column of the record of applicable technical directives.

*Source paragraph:* 4.5.9.4e

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)-(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## removepg

### Remove Page Column Entry

*Description:* Identifies an entry within the Remove Page column on the change instruction sheet.  
*Source paragraph:* 4.7.3.10.2  
*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## revnum

### Revision Number

*Description:* Identifies the revision number of the manual on the title page.  
*Source paragraph:* 4.8  
*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## row

### Row

*Description:* Identifies a row in a table.  
*Source paragraph:* 4.2.7  
*Content Model:* (entry|entrytbl)+

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
rowsep	%YESORNO; #IMPLIED		Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.
valign	TOP BOTTOM MIDDLE		Defines the vertical alignment for cell contents.
security	(U   C   S   N) N		Identifies security level of the document

## safesum

### Safety Summary

*Description:* Identifies the safety summary of the manual. The title is automatically generated by the FOSI.

Source paragraph: 4.5.10

Content Model: (para0+) +(figure|table|warning|caution|precaut)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcf	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N)</b>	<b>N</b>	Identifies security level of the element.

## seal

### Seal

*Description:* Department of the Navy Seal, with command identifier.

*Source paragraph:* 4.5.1.5

*Content Model:* EMPTY

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## secentry

### Secondary Index Entry

*Description:* Used by author to tag data for inclusion in the index as a secondary topic

*Source paragraph:* 4.2.9.8

*Content Model:* topic

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## secindex

### Section Index

*Description:* Identifies a secondary alphabetical index topic in the manual.

*Source paragraph:* 4.2.9.8

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) - (secindex)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
pridnbr	<b>CDATA</b>	<b>#IMPLIED</b>	Defines a unique identification number that allows an association between items tagged as primary index topics and those tagged as secondary index topics.

## section

### Section

*Description:* Identifies a section of the manual, the next further breakdown of a chapter.

*Source paragraph:* 4.2.9.4

*Content Model:* (title, para0+)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## secttoc

### Section Table of Contents

**Description:** Defines the table of contents for each section of the checklist.

**Source paragraph:** MIL-PRF-7700F paragraph 3.7.2.2

**Content Model:** ((parano|subparano)?, paratitle, pnumber)\*

normproccl, emergproccl, and performdatacl

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>NONE</b>	Identifies the the sectoc will be autogenerated by the FOSI.

---

## seqlist

### Sequential List

**Description:** Identifies a sequential list. All items within the sequential list will appear numbered, on separate lines, in the order they were entered by the author.

**Source paragraph:** MIL-PRF-28001

**Content Model:** (title?, item+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
numstyle	<b>ALPHAUC   ALPHALC   ARABIC   ROMANUC   ROMANLC</b>		Defines the type of enumeration on the sequential list.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## seqno

### Sequence Number

*Description:* Defines the sequence number for a hazard warning.

*Source paragraph:* 4.3.10.1

*Content Model:* #PCDATA

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## serno

### Serial Number

*Description:* Identifies serial numbers of the equipment on the title page and the difference data sheet.

*Source paragraph:* 4.5.1.3.4

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## sigblock

### Signature Block

*Description:* Provides signature block.

*Source paragraph:* MIL-STD 38784A DRAFT

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## spanspec

### Span Specification

**Description:** Used to join two or more columns in a table. Span specifications are similar to column specifications (colspec) except that they describe areas of the table that can be spanned (joined) using a table entry (entry). For example, a three-column table may have columns named 1, 2, and 3 respectively. A span named 23 may be declared using spanspec. When spanname=23 is used on an entry, that entry would occupy the space in both columns 2 and 3.

**Source paragraph:** MIL-PRF-28001 8.4.5.3

**Content Model:** EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
namest	<b>NMTOKEN</b>	<b>#REQUIRED</b>	The name of the first column of the set of columns that you want to span.
nameend	<b>NMTOKEN</b>	<b>#REQUIRED</b>	The name of the last column of the set of columns that you want to span.
spanname	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Defines a unique name for the span.
align	<b>LEFT   RIGHT   CENTER   JUSTIFY   CHAR</b>		Allows the author to align text within the cell.
charoff	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Determines the distance the cell content should offset from the horizontal alignment character.
char	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the alignment character that can be used to align values within a column.
colsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a vertical line to separate columns. A value of 1. for this attribute will generate column separators.
rowsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.

## step1

### First Level Procedural Step

**Description:** Identifies a first level procedural step.

**Source paragraph:** 4.2.9.5.3

Content Model: warning\*, caution?, note?, para, note?, (step2, step2+)?

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcf	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness critical Processes. A <b>**HCP**</b> symbol will appear when set equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Used to generate a revision
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.

---

# step2

## Second Level Procedural Step

*Description:* Identifies a second level procedural step.

*Source paragraph:* 4.2.9.5.3

*Content Model:* warning\*, caution?, note?, para, note?, (step3, step3+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcg	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.. A <b>**FCP**</b> symbol will appear when set equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness critical Processes. A <b>**HCP**</b> symbol will appear when set equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Used to generate a revision
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.

---

# step3

## Third Level Procedural Step

*Description:* Identifies a third level procedural step.

*Source paragraph:* 4.2.9.5.3

*Content Model:* warning\*, caution?, note?, para, note?, (step4, step4+)?

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcv	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness critical Processes. A <b>**HCP**</b> symbol will appear when set equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Used to generate a revision
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.

navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.

## step4

### Fourth Level Procedural Step

*Description:* Identifies a fourth level procedural step.

*Source paragraph:* 4.2.9.5.3

*Content Model:* warning\*, caution?, note?, para, note?

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness critical Processes. A <b>**HCP**</b> symbol will appear when set equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference to this element.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Insert Change Level
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Change Level

status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Allows you to specify the status of this element.
revchg	<b>NUMBER</b>	<b>0</b>	Used to generate a revision
afmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that AF should commit to memory. Only use on clsteps.
navmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Navy should commit to memory. Only use on clsteps.
bothmem	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows bolding for a step that Aboth Navy and AF should commit to memory. Only use on clsteps.

## subfig

### Subfigure

*Description:* Identifies a subfigure. This element is used for multisheet illustrations, each sheet being a subfigure. The FOSI will automatically generate the sheet count (e.g Sheet 1 of 10, Sheet 2, etc.)

*Source paragraph:* 4.2.4.2

*Content Model:* ((graphic, legend?)|figtable)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
orient	<b>PORT LAND1</b>		Defines the orientation of the figure.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## subject

## Subject

*Description:* Identifies the prime title of the manual on the title page.

*Source paragraph:* 4.5.1.3.4

*Content Model:* (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## subjinfo

### Subject Information (Not Used; Under Review)

*Description:* Identifies subject information that appears at the top of every column in a chapter. This first subjinfo tag in a chapter should be placed after the chapter tag or the first section tag (if used). Additional subjinfo tags have no restrictions on placement and should be used wherever the information changes.

*Source paragraph:*

*Content Model:* EMPTY

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
subjup	<b>CDATA</b>	<b>#REQUIRED</b>	Not currently supported by the FOSI. Element and attributes are under review.
subjlwr	<b>CDATA</b>	<b>#REQUIRED</b>	Not currently supported by the FOSI. Element and attributes are under review.
infoup	<b>CDATA</b>	<b>#REQUIRED</b>	Not currently supported by the FOSI. Element and attributes are under review.
infolwr	<b>CDATA</b>	<b>#REQUIRED</b>	Not currently supported by the FOSI. Element and attributes are under review.

---

## subobjmed

### Sub Object Media

*Description:* Developed for use in interactive manuals to evoke multimedia applications. Defines details about the external application being invoked.

*Source paragraph:*

*Content Model:* object

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.

label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## subpara1

### First Subordinate Paragraph

*Description:* Identifies a first subordinate paragraph.

*Source paragraph:* 4.2.9.5.1.2

*Content Model:* (title, warning\*, caution?, note?, para, note?, (step1, step1+)?, subpara2\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.

ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## subpara2

### Second Subordinate Paragraph

*Description:* Identifies a second subordinate paragraph.

*Source paragraph:* 4.2.9.5.1.2

*Content Model:* (title, warning\*, caution?, note?, para, note?, (step1, step1+)?, subpara3\*)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.

id	ID	#IMPLIED	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	NUMBER	0	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	NUMBER	0	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	NUMBER	0	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	NUMBER	0	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	NUMBER	0	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	IDREFS	#IMPLIED	Allows you to assign an applicable reference
verdate	CDATA	#IMPLIED	Identifies the date the element was verified.
verrem	CDATA	#IMPLIED	Provides a place for the author to make remarks about the verification of the element.
verstatus	(UNVER   VER)	UNVER	Identifies verification status of the element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
indexid	CDATA	#IMPLIED	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

---

# subpara3

## Third Subordinate Paragraph

*Description:* Identifies a third subordinate paragraph.

*Source paragraph:* 4.2.9.5.1.2

*Content Model:* (title, warning\*, caution?, note?, para, note?, (step1, step1+)?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

---

## subparano

### Sub Paragraph Number

*Description:* Allows tagging of the subpara number in the section TOC.

*Source paragraph:*

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## subtitle

### Subtitle

*Description:* Identifies the subtitle of the manual on the title page.

*Source paragraph:* 4.5.1.3.5

*Content Model:* (#PCDATA)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## superseded

## Supersedure Notice

*Description:* Identifies the supersede notice on the title page.

*Source paragraph:* 4.5.1.6

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## suppl

### Supplement Notice

*Description:* Identifies the supplement notice on the title page.

*Source paragraph:* 4.5.1.8

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## symb

### Symbol

*Description:* Allows user to enter text as symbol on "Other Considerations".

*Source paragraph:*

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## syms

### Symbols

*Description:* Allows user to place symbol markings within procedures to coincide with "Other Considerations".

*Source paragraph:*

Content Model: (w | c)?, symb  
 procedure

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

# symsect

## Symbol Paragraph

Description: Identifies the paragraph used to define symbols (e.g ESDS symbol) and the associated list.

Source paragraph: 4.5.9 & 4.3.4

Content Model: ((title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*), (symtitle?, (term, def)+))

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
rtermwidth	<b>NUTOKEN</b>	<b>2.75IN</b>	Allows you to set the right term width.
ltermwidth	<b>NUTOKEN</b>	<b>0.75IN</b>	Allows you to define the left term width.
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.

verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## symtitle

### Symbol Paragraph

*Description:* Identifies the title used to define symbols (e.g ESDS symbol) and the associated list.

*Source paragraph:* 4.5.9 & 4.3.4

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## table

### Table

*Description:* Identifies a table.

Source paragraph: 4.2.7

Content Model: (title, tgroup+) -(figure | table | foldout) +(tfoot|tfnref|tfnndisplay)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
tabstyle	<b>NMTOKEN</b>	<b>#IMPLIED</b>	
frame	<b>TOP   BOT-TOM   TOPBOT   ALL   SIDES   NONE</b>	<b>ALL</b>	
colsep	<b>NUMBER</b>	<b>1.</b>	Toggle switch to indicate if column separators are used.
rowsep	<b>NUMBER</b>	<b>1.</b>	Toggle switch to indicate if row separators are used.
orient	<b>PORT   LAND PORT</b>		Defines orientation of table on the page. %verified;
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document
pgwide	<b>NUMBER</b>	<b>1.</b>	Specifies if table stretches across the entire page.
cellcont	<b>CONTINUED   CONT</b>	<b>CONTINUED</b>	Specifies whether cell contents can be continued.
ID	<b>ID</b>	<b>#IMPLIED</b>	Provides means to specify an ID number for the table.
footnotes	<b>PAGE   END</b>	<b>#IMPLIED</b>	Allows you to specify whether table footnotes appear at the end of the table or at the end of the page.
leftind	<b>CDATA</b>	<b>#IMPLIED</b>	Specifies left indent of the table in relationship to the page.
rightind	<b>CDATA</b>	<b>#IMPLIED</b>	Specifies right indent of the table in relationship to the page.
leftmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies left margin of the table.
rightmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies left margin of the table.
topmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies left margin of the table.
botmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies left margin of the table.

mindepth	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Specifies the minimum depth of the table.
pgdeep	<b>NUMBER</b>	<b>0</b>	Allows you to specify whether that table is equal to the depth of the page.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Specifies all IDs of elements or data items that have an applicable reference.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
deltype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.

---

## tablelist

### List of Tables

*Description:* Identifies the list of tables in the manual. This information is automatically compiled by the FOSI. If this element is not used, no list of tables will appear in the manual.

*Source paragraph:* 4.5.8

*Content Model:* (tabno, title, pageno)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

security	(U   C   S   N) N	Identifies security level of the document
----------	-------------------	---

## tabmat

### Table Material

*Description:*

*Source paragraph:* 4.3.9

*Content Model:* (tgroup+) -(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the element.

## tabno

### Table Number

*Description:* Identifies the Table number within the table list when the table list is manually tagged.

*Source paragraph:* NONE

*Content Model:* #PCDATA

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tasks

### Tasks

*Description:* Identifies the tasks for each crew member listed in the Coordinated Procedures Table

*Source paragraph:* 3.2.12.3

*Content Model:* (newpos1?, newpos2?, newpos3?, newpos4?, newpos5?) | (cmbr1?, cmbr2?, cmbr3?, cmbr4?, cmbr5?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tbody

### Table Body

*Description:* Identifies the body of a table (e.g. material below the boxheads).

*Source paragraph:* 4.3.9

*Content Model:* (row+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
valign	<b>TOP   MID-DLE   BOT-TOM</b>		Defines the vertical alignment of data within a cell of the table.

---

## tctolist

### Time Compliance Technical Orders Paragraph

*Description:* Identifies the time compliance technical orders paragraph and the associated table.

*Source paragraph:* 4.5.9.3

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*, tctotbl?)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage <b>*** ESDS ***</b> parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A <b>**NSP**</b> symbol will appear when set equal to 1.
fcp	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the <b>*** FCP ***</b> symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the <b>*** HCP ***</b> symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the <b>*** HCI ***</b> symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the <b>*** OCP ***</b> symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the <b>*** OCI ***</b> symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

security	(U   C   S   N) N	Identifies security level of the element.
----------	-------------------	---

# tctono

## Time Compliance Technical Order Number

*Description:* Identifies an entry in the TCTO Number column in the TCTO table.

*Source paragraph:* 4.5.9.3

*Content Model:* (#PCDATA) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
deltype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the document

# tctorow

## Time Compliance Technical Orders Row

*Description:* Identifies a row in the time compliance technical orders table.

*Source paragraph:* 4.5.9.3

*Content Model:* (tctono, title, date)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
deltype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.

delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

## tctotbl

### Time Compliance Technical Order Table

*Description:* Identifies the table that lists all TCTOs applicable to the manual. The FOSI will automatically generate the table title and the column headings (boxheads).

*Source paragraph:* 4.5.9.3

*Content Model:* (tctorow+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## term

## Term

**Description:** Identifies an entry in the term portion of a list. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

**Source paragraph:** 4.3.4

**Content Model:** ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

## tfnid

### Table Footnote Id

**Description:** This element is for placing a footnote in a 38784 table model. A superscript will be placed at this point in the table and the footnote value will be placed at the bottom of the table if a table footnote display is created.

**Source paragraph:** 4.2.7.5

**Content Model:** (#PCDATA)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#REQUIRED</b>	This allows you to identify each element and later reference it by its id value.
tfntype	<b>NUM ALPHA SYM</b>		Defines the type of symbol used to indicate a table footnote.
tfnsymbol	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to define the actual symbol to serve as a table footnote reference.
tfnval	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the text value of the reference. The actual data to be generated at the bottom of the table should be placed with this attribute.

---

## tfnref

### Table Footnote Reference

**Description:** This element is for referencing a footnote in a 38784 table model that was created with a table footnote id. The superscript that was generated from the table footnote id will be placed at this point in the table and the footnote value will be placed at the bottom of the table if a table footnote display is created.

**Source paragraph:** 4.2.7.5

**Content Model:** EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
xrefid	<b>IDREF</b>	<b>#REQUIRED</b>	Defines the ID of the element that you are referencing. The value of this attribute should match the value of an ID attribute elsewhere in the manual.

---

## tfoot

### Table Foot

*Description:* The foot of the table.

*Source paragraph:* 4.2.7.5

*Content Model:* (tfnid\*)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tfndisplay

### Table Footnote Display

*Description:* This element is for displaying footnotes in a 38784 table model. Footnotes to tables will be displayed at the end of the table. This element should be placed in a span in the last row of the table.

*Source paragraph:* 4.2.7.5

*Content Model:* EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tgroup

### Table Group

*Description:* Identifies a table group, which consists of a table heading (boxheads) and a table body.

*Source paragraph:* 4.2.7

*Content Model:* (colspec\*, spanspec\*, thead?, tbody)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
cols	<b>NUMBER</b>	<b>#REQUIRED</b>	Defines the number of columns within the table.
colsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a vertical line to separate columns. A value of 1. for this attribute will generate column separators.
rowsep	<b>%YESORNO;</b>	<b>#IMPLIED</b>	Allows you to include a horizontal line to separate rows. A value of 1. for this attribute will generate row separators.
align	<b>(LEFT   RIGHT   CENTER   JUSTIFY   CHAR)</b>	<b>LEFT</b>	Allows the author to align text within the cell.
leftind	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the left indent of text within the cell.
rightind	<b>CDATA</b>	<b>#IMPLIED</b>	Defines a right indent of the text within the cell.
leftmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the left margin of the cell.
rightmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the right margin of the cell.
topmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the top margin of the cell.
botmar	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the bottom margin of the cell.
mindepth	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Defines the minimum depth of the table.
charoff	<b>NUTOKEN</b>	<b>#IMPLIED</b>	Determines the distance the cell content should offset from the horizontal alignment character.
char	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the alignment character that can be used to align values within a column.

---

## thead

### Table Heading (Boxheads)

*Description:* Identifies a table heading (boxheads). The table heading (boxheads) repeat when the table breaks across a column or page.

*Source paragraph:* 4.2.7.3

*Content Model:* (colspec\*, row+) -(entrytbl)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
valign	<b>TOP   MIDDLE   BOTTOM</b>		Defines the vertical alignment of text within a cell.

---

## title

### Title

*Description:* Identifies a title (e.g. chapter, paragraph, table, etc.). The title should be tagged exactly as it is to appear in the table of contents. Titles that are placed on tables will appear in the List of Tables, and titles that

are placed on figures and figure tables will be placed in the List of Illustrations. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

*Source paragraph:* MIL-STD-38784

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

## tmidno

### Technical Manual Identification Number

*Description:* Identifies the technical manual identification number. When used on the title page (idinfo), it will cause the technical manual number to appear on the title page and at the top of each page in the manual. When used in the list of related publications (lrp), will cause the technical manual number to be placed in the Publication Number column.

*Source paragraph:* 4.2.1.5 & 4.5.9.2

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
service	(AF   NAVAIR   NAVSEA   SPAWARS   ARMY   MC   DLA   CG   DOD)	#IMPLIED	Defines the branch of service.
delttype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	(U   C   S   N) N		Identifies security level of the document

---

# tmimprep

## Technical Manual Improvement Report

*Description:* Identifies the technical manual improvement report paragraph.

*Source paragraph:* 4.5.9

*Content Model:* (title, (para, warning?, caution?, note?)\*, (step1, step1+)?, subpara1\*)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
emergency	<b>NUMBER</b>	<b>0</b>	Indicates that the primary paragraph will produce an emergency border on the page when set equal to 1.
id	<b>ID</b>	<b>#IMPLIED</b>	Allows author to designate a unique paragraph ID for use with external and cross references.
esds	<b>NUMBER</b>	<b>0</b>	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage *** ESDS *** parts shall be identified by the esds symbol by setting attribute equal to 1.
nsp	<b>NUMBER</b>	<b>0</b>	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to 1.
fcf	<b>NUMBER</b>	<b>0</b>	Fracture Critical Process. All paragraphs which address Fracture Critical Process shall be identified by the *** FCP *** symbol by setting attribute equal to 1.
hcp	<b>NUMBER</b>	<b>0</b>	Hardness Critical Process. All paragraphs which address Hardness Critical Process shall be identified by the *** HCP *** symbol by setting attribute equal to 1.
hci	<b>NUMBER</b>	<b>0</b>	Hardness Critical Item. All paragraphs which address Hardness Critical Item shall be identified by the *** HCI *** symbol by setting attribute equal to 1.
ocp	<b>NUMBER</b>	<b>0</b>	Observable Critical Process. All paragraphs which address observable critical processes shall be identified by the *** OCP *** symbol by setting attribute equal to 1.
oci	<b>NUMBER</b>	<b>0</b>	Observable Critical Item. All paragraphs which address observable critical items shall be identified by the *** OCI *** symbol by setting attribute equal to 1.
applicref	<b>IDREFS</b>	<b>#IMPLIED</b>	Allows you to assign an applicable reference
verdate	<b>CDATA</b>	<b>#IMPLIED</b>	Identifies the date the element was verified.
verrem	<b>CDATA</b>	<b>#IMPLIED</b>	Provides a place for the author to make remarks about the verification of the element.
verstatus	<b>(UNVER   VER)</b>	<b>UNVER</b>	Identifies verification status of the element.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.

delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the element.

## told

### Takeoff and Landing Data Card

*Description:* Defines the takeoff and data landing card used in the normal procedures checklist.

*Source paragraph:* MIL-PRF-7700F paragraph 3.7.5

*Content Model:* (graphic)

normproccl

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

## topic

### Index topic

*Description:* Used by author to tag topics that will be appear in the index. Used as subelement for preentry and secentry.

*Source paragraph:* 4.2.9.8

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+)-(figure | table | foldout)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
page	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the page where the index topic occurs in the manual.

---

## tpdr

### Technical Publications Deficiency Report

*Description:* Identifies the technical publications deficiency report list.

*Source paragraph:* 4.5.9

*Content Model:* (tpdrtbl | none)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tpdrlocation

### Technical Publications Deficiency Report Location

*Description:* Identifies an entry in the Location column of the technical publications deficiency report list.

*Source paragraph:* 4.5.9

*Content Model:* (#PCDATA)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## tpdrno

### Technical Publications Deficiency Report Number

*Description:* Identifies an entry in the Report Control Number column of the technical publications deficiency report list.

*Source paragraph:* 4.5.9

*Content Model:* (#PCDATA)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	(U   C   S   N) N		Identifies security level of the document

---

## tpdrtbl

# Technical Publications Deficiency Report

*Description:* Identifies the technical publications deficiency report list.

*Source paragraph:* 4.5.9

*Content Model:* (activity, tpdarno, tpdlocation)+

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
id	<b>ID</b>	<b>#IMPLIED</b>	This allows you to identify each element and later reference it by its id value.
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

## typedes

### Type Designation

*Description:* Identifies a type designation on the title page and the difference data sheet.

*Source paragraph:* 4.5.1.3.4 & 4.7.3.3.1B

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure | table | foldout)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# typeno

## Directive Type and Number

*Description:* Identifies an entry in the Type/No column of the record of applicable technical directives table.

*Source paragraph:* 4.5.9.4a

*Content Model:* ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil  
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |  
acronym | prindex | secindex | nameloc | clink | ilink | object)+) -(figure  
| table | foldout)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# verbatim

## Verbatim Text

*Description:* A verbatim element is used to format computer examples or similar text in a typewritten emulation mode. Formatting follows 'asis' quadding with monospaced font.

*Source paragraph:* MIL-PFR-28001C, B.3.14

*Content Model:* CDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
allowbrk	<b>NUMBER</b>	<b>1</b>	Defines if a break can be inserted into verbatim text.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document

---

# verstat

## Verification Status Page

*Description:* Identifies the verification status page in the manual. This information is automatically compiled by the FOSI. This element should not be used if a verification status page is not desired.

*Source paragraph:* 4.5.4

*Content Model:* (tabmat?)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# vollep

## Volume List of Effective Pages

*Description:* Identifies the volume List of Effective Pages.

*Source paragraph:* 4.2.9.1

*Content Model:* (vollepcontents)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# vollepenry

## Volume LEP Entry

*Description:* LEP entry that should appear in the volume LEP.

*Source paragraph:* 4.5.3

*Content Model:* volleppage, vollepchg

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# volleppage

## Volume LEP Page Number

*Description:* Volume Page Number for each entry in the VOLLEP.

*Source paragraph:* 4.5.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

# vollepchg

## Volume LEP Change Number

*Description:* Volume Change Number for each entry in the VOLLEP.

*Source paragraph:* 4.5.3

*Content Model:* #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## volcontents

### Volume Contents

*Description:* Identifies a volume contents.

*Source paragraph:*

*Content Model:* ((parano|subparano)?, paratitle, pgnumber)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

---

## volilluslist

### Volume Illustration List

*Description:* Identifies a volume list of illustrations.

*Source paragraph:* 4.2.9.1

*Content Model:* (figno, title, pageno)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

---

## volleppcontents

### Volume Contents

*Description:* Identifies the volume.

Source paragraph: 4.2.9.1

Content Model: (vollepentry+)

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.
lepcount	<b>CDATA</b>	<b>#IMPLIED</b>	Defines the number of pages in the lep for each volume.

---

## voltablelist

### Volume Table List

Description: Identifies a volume list of tables.

Source paragraph: 4.2.9.1

Content Model: (tabno, title, pageno)\*

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
autobuild	<b>CDATA</b>	<b>#CONREF</b>	This attribute should be set equal to 1. when the acronymlist is autogenerated.

---

## volnot

### Volume Notice

Description: Identifies the volume notice on the title page.

Source paragraph: 4.2.9.1

Content Model: #PCDATA

### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
NONE			

---

## volnum

### Volume Number

Description: Identifies the volume number on the title page.

Source paragraph: 4.2.9.1

Content Model: #PCDATA

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

---

# volume

## Volume

Description: Identifies a volume.

Source paragraph: 4.2.9.1

Content Model: ((front|auxfront), body, rear?)

## ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	<b>CDATA</b>	<b>#IMPLIED</b>	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	<b>CDATA</b>	<b>#IMPLIED</b>	System, Subsystem, or Subject Number can be assigned to this element.
indexid	<b>CDATA</b>	<b>#IMPLIED</b>	Provides an index ID for this element. Not currently supported by the FOSI - this attribute is under review.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
security	<b>(U   C   S   N) N</b>		Identifies security level of the document
docid	<b>CDATA</b>	<b>#IMPLIED</b>	Allows for the author to define an identification number for the document.
docstat	<b>(REVISION   CHANGE   PRELIM   DRAFT   FORMAL)</b>	<b>PRELIM</b>	Author can stipulate what form the manual is in.

verstatpg	(VER   UN- VER)	VER	Author can stipulate a verified or unverified manual. Use of this attribute will trigger the generation of the verification status page and the temporary file - vsmatter.dat. See the accompanying readme.txt file for verification status for more detail.
Index	NUMBER	0	Indicated whether an index is included in the manual. Attribute should be set to 1 when an index is present. Use of this attribute will affect the level of detail in the TOC
service	(AF   NAVAIR #REQUIRED   NAVSEA   SPAWARS   ARMY   MC   DLA   CG   DOD)		Defines the branch of service.
volpages	%YESORNO;	0	Indicates whether the page numbers within the volume use the volume number prefix. Zero indicates standard page numbers. 1. indicates a volume prefix will be used.
resetnbrs	%YESORNO;	1	Allows you to reset chapter numbers when continuing to a second or subsequent volume. 1. will reset chapter numbers back to 1. Zero will continue with the chapter numbers.

## W

### Warning

*Description:* Allows for a boxed 'W' as a symcol in the addcond.

*Source paragraph:*

*Content Model:* EMPTY

syms , syms1

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
None			

## warning

### Warning

*Description:* Identifies a WARNING in the manual. Multiple warning tags may be used only when it is desired to change the warning icon (standard or hazardous warning graphic).

*Source paragraph:* 4.3.10

*Content Model:* (icon?, para\*) -  
(randlist | deflist | seqlist | figure | table | foldout | warning | caution | precaut )

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description

deltype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

## warnpage

### Warning Page

*Description:* Identifies the warning page(s) of the manual.

*Source paragraph:* 4.5.2

*Content Model:* (wpgentry+)

#### ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
deltype	DELETE   REAL   RESERVE   NA	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	NMTOKEN	#IMPLIED	Used during change package process to indicate the element was deleted at the change level indicated
status	EMPTY   DELETED   RESERVED   NOTAPP	#IMPLIED	Used during the change package process to indicate the current status of the element.
revchg	NUMBER	0	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.

---

## wpgentry

### Warning Page Entry

*Description:* Identifies an individual warning on the warning page(s).

*Source paragraph:* 4.5.2

*Content Model:* (title, para+)

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
warnbox	<b>NUMBER</b>	<b>#IMPLIED</b>	Allows you to specify the appearance and size of the warning box.
delttype	<b>DELETE   REAL   RESERVE   NA</b>	<b>#IMPLIED</b>	Used to generate change packages - Delete Type
inschlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the element was inserted at the change level indicated.
delchlvl	<b>NMTOKEN</b>	<b>#IMPLIED</b>	Used during change package process to indicate the element was deleted at the change level indicated
status	<b>EMPTY   DELETED   RESERVED   NOTAPP</b>	<b>#IMPLIED</b>	Used during the change package process to indicate the current status of the element.
revchg	<b>NUMBER</b>	<b>0</b>	Toggle between a revision or a change. Attribute is set to 1 to indicate a revision.
titlefont	<b>(10PT   14PT) 14PT</b>		Specifies the font size choices available for a warning page entry.
line	<b>NUMBER</b>	<b>#IMPLIED</b>	Specifies whether a line should appear between warning page entries.

## xref

### Cross-reference

*Description:* Identifies a cross-reference to a paragraph, figure, table, etc.

*Source paragraph:* 4.3.1

*Content Model:* EMPTY

## ATTRIBUTE LIST

*Only these attributes are applicable and supported by the fosi.*

Attribute	Type	Default	Description
xrefid	<b>IDREF</b>	<b>#REQUIRED</b>	Defines the ID of the element that you are referencing. The value of this attribute should match the value of an ID attribute elsewhere in the manual.
HyTime	<b>NAME #FIXED</b>	<b>CLINK</b>	Used in combination with HyTime to establish contextual link.
HyNames	<b>CDATA #FIXED</b>	<b>LINKEND XREFID</b>	Used in combination with HyTime to establish contextual link.

